



 
Mandis RM-C1244 Replacement Remote Control Instruction Manual

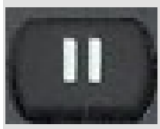 
 
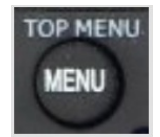 
[Home](#) » [Mandis](#) » Mandis RM-C1244 Replacement Remote Control Instruction Manual 

Mandis RM-C1244 Replacement Remote Control Instruction Manual

 
 
 
 
 
 
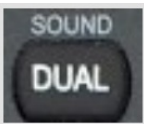 
 
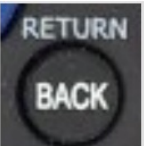 


Original	Recharge
----------	----------

	Power		Power
	Mute		Mute
	Red / Eject		Red
	Red / Eject		Eject
	Green / Title		Green
	Yellow / DVD		Yellow
	Yellow / DVD		Options
	Blue / A-B		Blue
	<</[≡0]		<<
	>>/[≡?]		>>
	<</[≡+]		<<
	>> /[≡..]		>>
	Play		Play

	Pause		Pause
	Stop		Stop
	Angle / [≡i]		Smart
	Return / Text		Text
	Return / Text		Shift + Back
	Subtitle		Subt
	Display		Shift + Info
	Menu / Info		Info
	Menu / Info		D. Menu
	Menu		Menu
	Up		Up
	Source		AV
	Left		Left

	OK		Ok
	Right		Right
	EPG		Guide
	Down		Down
	Exit		Exit
	Vol+		Vol +
	FAV		Pre Ch
	CH+		Ch +
	Vol-		Vol

	REP		Rec
	CH-		Ch –
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	Audio		Dual
	0		0
	Recall / Goto		Back



Contents

[1 Documents / Resources](#)

[1.1 References](#)

[2 Related Posts](#)

Documents / Resources



[Mandis RM-C1244 Replacement Remote Control](#) [pdf] Instruction Manual
CELED236HDVB5, RM-C1244, RM-C1244 Replacement Remote Control, Replacement Remote Control, Remote Control, Control

References

- [M Télécommande qui remplace JVC RM-C1244](#)
- [User Manual](#)