



Mandis RM-C3184 Remote Control Instructions

[Home](#) » [Mandis](#) » Mandis RM-C3184 Remote Control Instructions 

Contents

- [1 Mandis RM-C3184 Remote Control](#)
- [2 Product Information](#)
- [3 Product Usage Instructions:](#)
- [4 Frequently Asked Questions \(FAQ\)](#)
- [5 BUTTON FUNCTION](#)
- [6 Documents / Resources](#)
 - [6.1 References](#)
- [7 Related Posts](#)



Mandis RM-C3184 Remote Control



Product Information

Specifications:

- **Product Name:** JVC RM-C3184
- **Compatibility:** Replacement remote control for JVC RM-C3184
- **Power Source:** 2 AAA batteries (not included)
- **Color:** Black

Product Usage Instructions:

Power On/Off:

To power on the device, press the “Power” button. To power off, press the “Power” button again.

Volume Control:

Use the “Vol+” and “Vol-” buttons to increase or decrease the volume level.

Mute:

To mute the sound, press the “Mute” button. Press it again to unmute.

Channel Selection:

Use the number buttons (1-9) to directly enter a channel number. Press the “Ch +” and “Ch -” buttons to navigate through channels.

Navigation:

Use the arrow buttons (Up, Down, Left, Right) to navigate through menus and options.

Menu Access:

To access the menu, press the "Menu" button. Use the arrow buttons to navigate through the menu options. Press the "OK" button to select an option.

Input Selection:

Use the "AV" or "TV" button to switch between different input sources.

Frequently Asked Questions (FAQ)

- **How do I change the language settings?**

Press the "Lang" button and use the arrow buttons to select the desired language. Press the "OK" button to confirm.

- **How do I enable subtitles?**

Press the "Subt." or "Text" button to toggle subtitles on or off.

- **How do I access the EPG (Electronic Program Guide)?**

Press the "EPG" or "Guide" button to access the program guide.

- **How do I play or stop a video?**

Use the "Play" and "Stop" buttons to control video playback.

- **How do I activate 3D mode?**

Press the "3D" button to activate or deactivate 3D mode, if supported by your TV.

BUTTON FUNCTION

Original		Replacement		Original		Replacement	
	Netflix		Media		Vol+		Vol +
	Power		Power		Vol-		Vol -
	Source		AV		P+		Ch +
	Mute		Mute		P-		Ch -
	1		1		OK		Ok
	2		2		Menu		Menu
	3		3		Back		Back
	4		4		Exit		Exit
	5		5		Q.Menu		D. Menu
	6		6		Right		Right
	7		7		Up		Up
	8		8		Down		Down
	9		9		Left		Left
	0		0		i		Info
	↔		Pre Ch		Lang		Dual
	[TV]		TV/R		Subt.		Subt
	Internet		Smart		TXT		Text

Original		Replacement	
	EPG		Guide
	You Tube		Eject
	*/Q		Format
	[>]		Shift + Smart
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue
	Play		Play
	Rec		Rec
	Stop		Stop
	<<		<<
	Pause		Pause
	>>		>>
	[+]		3D

Documents / Resources



[Mandis RM-C3184 Remote Control](#) [pdf] Instructions
RM-C3184 Remote Control, RM-C3184, Remote Control, Control

References

- [M Replacement remote control for JVC RM-C3184 \(23366393\)](#)
- [User Manual](#)