



Mandis RM-D335 Replacement Remote Control Instruction Manual

[Home](#) » [Mandis](#) » Mandis RM-D335 Replacement Remote Control Instruction Manual 

Contents

- [1 Mandis RM-D335 Replacement Remote Control](#)
- [2 Product Information](#)
- [3 Product Usage Instructions](#)
- [4 Button Functionality](#)
- [5 Frequently Asked Questions \(FAQ\)](#)
- [6 Remote Control Function](#)
- [7 Documents / Resources](#)
 - [7.1 References](#)
- [8 Related Posts](#)

Mandis

Mandis RM-D335 Replacement Remote Control



Product Information

Specifications:

- **Model:** RM-D335
- **Compatibility:** Sony devices
- **Color:** Black
- **Power Source:** 2 AAA batteries (not included)
- **Dimensions:** 6.5 x 2.0 x 0.8 inches
- **Weight:** 3.5 ounces

Product Usage Instructions

Power On/Off:

To power on your Sony device, press the “Media TV/R” button. To power off, press and hold the “Sleep” button until the device shuts down.

Navigating Channels:

Use the number buttons (1-0) to directly enter a channel number. Press the “Guide” button to display the TV guide. Use the “Exit” button to exit the TV guide.

Playback Controls:

Play: Press the “Play” button to start playing a disc or media. – Pause: Press the “Pause” button to pause playback. – Stop: Press the “Stop” button to stop playback. – Forward/Next: Press the “>” button to skip to the next track or chapter. – Rewind/Previous: Press the “<” button to go back to the previous track or chapter.

Additional Controls:

Shuffle Program:

Press the “Shuffle Program” button to enable shuffle mode for your media. – Clear Disc: Press the “Clear Disc” button to remove any currently loaded discs. – Disc Skip: Use the “Disc Skip” buttons to navigate between different discs if multiple discs are loaded. – M.Scan: Press the “M.Scan” button to initiate a scan for available media channels. – Fader: Use the “Fader” button to adjust the audio balance.

Remote Replacement:

If you need to replace your Sony RM-D335 remote control, you can find a compatible replacement at the following website: [Replacement Remote Control for Sony RM-D335](#).

Remote Control Comparison

This document provides a detailed comparison between the original Sony RM-D335 CD player remote control and its replacement. The comparison outlines the button functions and their corresponding actions on both remote controls.

Button Functionality

The following tables list the buttons on the original and replacement remote controls and describe their respective functionalities.

Original Remote Control (Sony RM-D335)

Button	Function
Continue	Continue
Shuffle	Shuffle
Program	Program
1-10, >10	Number selection, more than 10
Clear	Clear
Disc 1	Select Disc 1
Disc 2	Select Disc 2
Disc 3	Select Disc 3
Disc 4	Select Disc 4
Disc 5	Select Disc 5
Disc Skip	Skip to next disc
Play, Pause, Stop	Control playback
<< AMS >>	AMS (Automatic Music Sensor) skip
M.Scan	Music Scan
Fader	Adjust sound balance

Replacement Remote Control

Button	Function
Media	Access media functions
TV/R	TV/Radio mode switch
Sleep	Set sleep timer
1-0, Guide, Exit	Number selection, access guide, exit current screen
Red, Green	Color function buttons
Yellow, Blue	Color function buttons
Smart	Access smart features
Back	Return to the previous screen
Play, Pause, Stop	Control playback
<< >>	Skip tracks or chapters
Pre Ch	Previous channel
Mute	Mute audio

Specifications

The specifications section provides information about the remote controls.

Attribute	Original Remote	Replacement Remote
Model	RM-D335	RM-D335
Brand	SONY	SONY
Functionality	CD Player Control	Media and TV/Radio Control
URL	Replacement remote control for SONY RM-D335	

Frequently Asked Questions (FAQ)

- **Q1: How do I insert the batteries?**

A1: To insert the batteries, locate the battery compartment on the back of the remote control. Slide open the compartment cover and insert two AAA batteries, making sure to match the positive and negative terminals correctly. Close the compartment cover securely.

- **Q2: Can I program this remote control to work with other devices?**

A2: No, the RM-D335 remote control is specifically designed for Sony devices and may not be compatible with other brands or models.

- **Q3: How far is the remote control's range?**

A3: The remote control has an effective range of approximately 20 feet. However, this range may vary depending on environmental factors such as obstacles and interference.

- **Where can I purchase the replacement remote control for the Sony RM-D335?**

The replacement remote control can be purchased at [Mandis remote control shop](#).

- **Will the replacement remote work with other Sony devices?**

The replacement remote is designed to work with the Sony RM-D335 and may have functionalities for other Sony devices. It includes buttons for media and TV/radio control.

• **How do I use the color function buttons on the replacement remote?**

The color function buttons (Red, Green, Yellow, and Blue) are typically used for interactive services or additional options provided by the device.

• **Can I control playback on my Sony CD player with the replacement remote?**

Yes, the replacement remote includes play, pause, and stop buttons for controlling playback on your Sony CD player.

Remote Control Function



Original		Replacement		Original		Replacement	
	Continue		Media		Disc 3		Yellow
	Shuffle		TV/R		Disc 4		Blue
	Program		Sleep		Disc 5		Smart
	1		1		Disc Skip		Back
	2		2		Play		Play
	3		3		Pause		Pause
	4		4		Stop		Stop
	5		5		I<< AMS		I<<
	6		6		AMS >>I		>>I
	7		7		<<		<<
	8		8		>>		>>
	9		9		M.Scan		Pre Ch
	10		0		Fader		Mute
	>10		Guide				
	Clear		Exit				
	Disc 1		Red				
	Disc 2		Green				



<https://all-remote-controls.co.uk/en/Sony/1057417-30866-replacement-remote-control-for-Sony-RM-D335.html>.

Documents / Resources

[Mandis RM-D335 Replacement Remote Control](#) [pdf] Instruction Manual
RM-D335, RM-D335 Replacement Remote Control, Replacement Remote Control, Remote Co
ntrol, Control

References

- [M Replacement remote control for SONY RM-D335](#)

- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)