



Mandis RM-ED 035 Remote Control Instructions

[Home](#) » [Mandis](#) » Mandis RM-ED 035 Remote Control Instructions 



Instructions



RM-ED 035 Remote Control

Contents

[1 RM-ED 035 Remote Control](#)

 
 
 
 
[2 Documents / Resources](#)

[2.1 References](#)

[3 Related Posts](#)

RM-ED 035 Remote Control

Original	Replacement	Original	Replacement
 Source	 AV / Input / RDS	 Guide	 Guide / EPG / -/--
 Power	 Power	 Up	 Up
 Theatre	 Sleep / Timer	 [i+]	 Info / Angle
 <<	 << / Tune-	 Left	 Left
 Play	 Play / Slow	 OK	 OK
 >>	 >> / Tune+	 Right	 Right
 Sync Menu	 D.Menu / Top	 Return	 Back / Return
 I<<	 I<< / Preset-	 Down	 Down
 Stop	 Stop / Hold	 Options	 Setup / OPT /
 >>I	 >>I / Preset+	 Home	 Menu / Home
 I-Manual	 TV/Radio /	 Red	 Red / Netflix / Search
 Scene	 Picture / Format	 Green	 Green / APP / Repeat
 [+]	 Zoom / Size	 Yellow	 Yellow / YouTube / Repeat
 Digital/Analog	 Smart / List	 Blue	 Blue / Prime Video / Random
 Exit	 Exit / Cancel / Clear	 1	 1
 Internet/Video	 Display / Media	 2	 2
 FAV	 Fav / Marker / PC	 3	 3

Original		Replacement	
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	Text		Text / Goto
	0		0
	Subtitle		Subtitle / EQ
	Vol+		Vol+
	Pr+		CH+ / Page+
	Mute		Mute / Dimmer
	Audio		Audio / Lang I/II
	Vol-		Vol-
	Pr-		CH- / Page-



<https://all-remote-controls.co.uk/en/Sony/1039330-6245-replacement-remote-control-for-Sony-RM-ED-035-148770011.html>

Documents / Resources



[Mandis RM-ED 035 Remote Control](#) [pdf] Instructions
RM-ED 035 Remote Control, RM-ED 035, Remote Control, Control

References

- [M Replacement remote control for SONY RM-ED 035 \(148770011\)](#)
- [User Manual](#)