




Mandis RM-ED 046 Remote Control Instructions

[Home](#) » [Mandis](#) » Mandis RM-ED 046 Remote Control Instructions 

Contents

- [1 Mandis RM-ED 046 Remote Control Instructions](#)
- [2 Product Information](#)
- [3 Button Instructions](#)
- [4 FAQ](#)
- [5 Documents / Resources](#)
 - [5.1 References](#)
- [6 Related Posts](#)

Mandis

Mandis RM-ED 046 Remote Control Instructions



Product Information

Specifications

- Model: Sony RM-ED046
- Compatibility: Sony TVs
- Power: 2 AAA batteries
- Wireless Range: up to 30 feet

Button Instructions

	Input		AV / Input / RDS		Left		Left
	Sync Menu		D.Menu / Top		OK		OK
	Power		Power		Right		Right
	<<		<< / Tune-		Return		Back / Return
	Play		Play / Slow		Down		Down
	Pause		Pause / Step / Freeze		Options		Setup / OPT /
	>>		>> / Tune+		Home		Menu / Home
	I<<		I<< / Preset-		Red		Red / Netflix / Search
	Stop		Stop / Hold		Green		Green / APP / Repeat
	>>I		>>I / Preset+		Yellow		Yellow / YouTube / Repeat
	Digital/Analog		Display / Media		Blue		Blue / Prime Video / Random
	[+]		Zoom / Size		1		1
	Scene		Smart / List		2		2
	Audio		Audio / Lang I/O		3		3
	Guide		Guide / EPG / -/--		4		4
	[i+]/[?]		Info / Angle		5		5
	Up		Up		6		6
	7		7		7		
	8		8		8		
	9		9		9		
	[=]/Text		Text / Goto				
	0		0		0		
	[...]		Subtitle / EQ				
	Vol+		Vol+				
	CH+		CH+ / Page+				
	Vol-		Vol-				
	CH-		CH- / Page-				
	Mute		Mute / Dimmer				
	Back/Recall		Fav / Marker / PC				

Power On/Off

To turn on the TV, press the **Power** button. To turn off the TV, press the **Power** button again.

Input Selection

To select different input sources, use the **Input** button. Press it repeatedly until the desired input is selected.

Navigation and Menu Access

Use the arrow buttons (**Up**, **Left**, **Right**, **Down**) for navigation and accessing menus.

Audio and Volume Control

To adjust the volume, use the **Vol+** and **Vol-** buttons. Press the **Mute** button to mute/unmute the audio.

Channel Selection

To change channels, use the **CH+** and **CH-** buttons. Press the **Fav** button to access favorite channels.

Additional Features

This remote control offers additional features such as subtitle control, EQ settings, dimmer adjustment, and more. Refer to the user manual for detailed instructions on using these features.

FAQ







Q: How do I replace the batteries?

A: To replace the batteries, locate the battery compartment on the back of the remote control. Open it and remove the old batteries. Insert two new AAA batteries, making sure to align the polarities correctly. Close the battery compartment.

Q: How far is the wireless range of this remote control?

A: The wireless range of this remote control is up to 30 feet. Make sure you are within this range for proper functionality.

Documents / Resources

	<p>Mandis RM-ED 046 Remote Control [pdf] Instructions RM-ED 046 Remote Control, RM-ED 046, Remote Control</p>
	<p>Mandis RM-ED 046 Remote Control [pdf] Instructions RM-ED 046 Remote Control, RM-ED 046, Remote Control, Control</p>
	<p>Mandis RM-ED 046 Remote Control [pdf] Owner's Manual RM-ED 046 Remote Control, RM-ED 046, Remote Control, Control</p>
	<p>Mandis RM-ED 046 Remote Control [pdf] Instructions RM-ED 046 Remote Control, RM-ED 046, Remote Control, Control</p>
	<p>Mandis RM-ED 046 Remote Control [pdf] Instructions RM-ED 046 Remote Control, RM-ED 046, Remote Control, Control</p>
	<p>Mandis RM-ED 046 Remote Control [pdf] Instructions RM-ED 046 Remote Control, RM-ED 046, Remote Control</p>

References

- [User Manual](#)