



Mandis RM-ED 052 Remote Control Instructions

[Home](#) » [Mandis](#) » Mandis RM-ED 052 Remote Control Instructions 

Contents

- [1 Mandis RM-ED 052 Remote Control](#)
- [2 Product Information](#)
- [3 Product Usage Instructions](#)
- [4 FAQ](#)
- [5 BUTTON FUNCTION](#)
- [6 Documents / Resources](#)
 - [6.1 References](#)
- [7 Related Posts](#)

Mandis

Mandis RM-ED 052 Remote Control



Product Information

Specifications

- **Product Name:** Sony RMED052
- **Compatibility:** Sony RM-ED-052 Remote Control
- **Power Input:** AC
- **Audio:** Yes
- **Features:** 3D X/Relaxed Search, TV Pause, Title List, Rec Pause Stop, Red Green Yellow Buttons
- **Additional Functions:** AV, Subt, Dual, Sleep, Shift + Pause, List, Blue Sync Menu, Guide SEN Options, Home Up Down Right Left, OK Digital/Analog Exit TV/Radio, D. Menu Back Guide Eject Options Info Smart, Format Text

Product Usage Instructions

Power On/Off and Volume Control

To power on the device, press the **Power** button. To turn off the device, press the **Power** button again. To adjust the volume, use the **Vol+** and **Vol-** buttons.

Navigation and Selection

Use the arrow buttons (**Up**, **Down**, **Right**, **Left**) to navigate through menus and options. Press the **OK** button to select an option.

TV Functions

- **Pause:** Press the **Pause** button to pause live TV.
- **List:** Press the **List** button to access the title list or program guide.
- **Rec:** Press the **Rec** button to start recording.
- **Stop:** Press the **Stop** button to stop playback or recording.

Color Buttons

- **Red, Green, Yellow, Blue:** These buttons may have different functions depending on the application or menu you are using. Please refer to the application or menu instructions for specific details.

FAQ

Q: Where can I find a replacement remote control for Sony RM-ED-052?

A: You can find a replacement remote control for Sony RM-ED-052 at the following website:
Replacement Remote Control for Sony RM-ED-052.

Q: What is the difference between the original and replacement remote control?

A: The original and replacement remote controls have similar functions and features. The replacement remote control is designed to be compatible with the Sony RM-ED-052 model.

Q: Can I control media playback with this remote control?

A: Yes, you can control media playback using the buttons on the remote control. The buttons for media functions are labeled as "Media".

BUTTON FUNCTION



Original	Replacement	Original	Replacement
	Power		Blue
	Input		Menu
	[...]		D. Menu
	Audio		Back
	DUAL		Guide
	3D		Eject
	X/Relaxed Search		Options
	Tv Pause		Info
	Title List		Smart
	<<		Up
	Play		Down
	>>		Right
	Rec		Left
	Pause		Ok
	Stop		Digital/Analog
	Red		Exit
	Green		TV/Radio
	Yellow		TV/R





Original		Replacement		Original		Replacement	
	1		1		Media		Media
	2		2				
	3		3				
	4		4				
	5		5				
	6		6				
	7		7				
	8		8				
	9		9				
	0		0				
	[+]		Format				
	[=]/Text		Text				
	Vol+		Vol +				
	Vol-		Vol -				
	Mute		Mute				
	Prog+		Ch +				
	Prog-		Ch -				



<https://all-remote-controls.co.uk/en/Sony/1056218-23879-replacement-remote-control-for-Sony-RM-ED-052-149199411.html>

Documents / Resources

	Mandis RM-ED 052 Remote Control [pdf] Instructions RM-ED 052 Remote Control, RM-ED 052, Remote Control, Control
--	--

References

- [Replacement remote control for SONY RM-ED 052 \(149199411\)](#)
- [User Manual](#)