



Mandis RM-ED011 Remote Control Instructions

[Home](#) » [Mandis](#) » Mandis RM-ED011 Remote Control Instructions 

Contents

- [1 Mandis RM-ED011 Remote Control](#)
- [2 Product Information](#)
- [3 Product Usage Instructions](#)
- [4 Instructions](#)
- [5 Documents / Resources](#)
 - [5.1 References](#)
- [6 Related Posts](#)



Mandis RM-ED011 Remote Control



Product Information

Specifications

- **Model:** Sony RM-ED011
- **Compatibility:** Works with Sony Bravia TVs
- **Dimensions:** Not specified
- **Weight:** Not specified
- **Color:** Black

Product Usage Instructions

Power and Sync

To turn on the TV, press the Power [+] button. To access the Sync Menu, press the Bravia Sync button. Use the Stop button to stop any ongoing sync or theater functions.

Audio and Video Controls

- Use the Picture / Format button to adjust the picture settings.
- Press the Info / Angle button to display information or change the viewing angle. The D.Menu / Top button allows you to access the TV's main menu or return to the top of a menu.

TV and Multimedia Functions

- Use the TV/Radio button to switch between TV and radio modes.
- The Smart / List button provides access to smart features and lists. The Subtitle / EQ button allows you to enable subtitles or adjust audio equalizer settings. The Audio / Lang I/II button lets you switch between audio

languages or audio tracks. The Guide button provides access to the electronic program guide (EPG).

Navigation and Options

- Use the Options button to access additional options. The Up,
- Down, Right, and Left buttons are used for navigation. Press OK to confirm selections or enter menus. The Home button takes you back to the home screen.

Color Buttons and Numeric Keypad

The Red, Green, Yellow, and Blue buttons have different functions depending on the context. The numeric keypad can be used to directly enter channels or perform other numeric operations.

Additional Controls

Use the Text button for text-related functions. The FAV button allows you to access favorite channels. The Vol+ and Vol- buttons control the volume, while the Prog+ and ProgBack buttons change channels. The Mute button mutes the sound, and the Dimmer button adjusts the screen brightness. The CH+ and CH- buttons navigate through channels or pages.

FAQ

Q: Where can I find a replacement remote control for Sony RM-ED011?

A: You can purchase a replacement remote control for Sony RM-ED011 from the following website: [Replacement Remote Control for Sony RM-ED011](#).

Sony RM-ED011

Instructions



Original	Recharge	Original	Recharge
Power	Power	Options	Setup / OPT /
[+]	Picture / Format	Up	Up
[i+]	Info / Angle	Down	Down
<</<I	<< / Tune-	Right	Right
Play Bravia Sync	Play / Slow	Left	Left
Pause Bravia	Pause / Step / Freeze	OK	OK
>>/I>	>> / Tune+	Home	Menu / Home
Sync Menu Bravia Sync	D.Menu / Top	Red	Red / Netflix / Search
Stop Bravia Sync	Stop / Hold	Green	Green / APP / Repeat
Theatre Bravia	TV/Radio /	Yellow	Yellow / YouTube / Repeat
Digital	Display / Media	Blue	Blue / Prime Video / Random
Analog	Smart / List	1	1
[...] Subtitle / EQ	Subtitle / EQ	2	2
Audio	Audio / Lang I/II	3	3
Guide	Guide / EPG / -/-	4	4
Source	AV / Input / RDS	5	5
Return	Back / Return	6	6



