




Mandis RM-ED013 Remote Control Instructions

[Home](#) » [Mandis](#) » Mandis RM-ED013 Remote Control Instructions 

Contents

- [1 Mandis RM-ED013 Remote Control](#)
- [2 Product Information](#)
 - [2.1 Specifications](#)
- [3 Product Usage Instructions](#)
- [4 Replacement Button Function](#)
- [5 Frequently Asked Questions](#)
- [6 Documents / Resources](#)
 - [6.1 References](#)
- [7 Related Posts](#)

Mandis

Mandis RM-ED013 Remote Control



Product Information

Specifications

- **Product Name:** Sony RM-ED013
- **Model Number:** RM-ED013
- **Compatibility:** Sony devices
- **Control Range:** Up to 10 meters
- **Power Source:** 2 AAA batteries (not included)
- **Dimensions:** 6.9 x 2.2 x 0.8 inches
- **Weight:** 3.5 ounces

Product Usage Instructions

Power and Sync

To power on the device, press the “POWER >” button. To sync the remote control with your Sony device, follow these steps:

1. Ensure that your Sony device is turned on.
2. Point the remote control towards the device.
3. Press and hold the “SYNC” button until the device recognizes the remote control.

Menu Navigation

The remote control allows you to navigate through the menu options of your Sony device. Use the arrow buttons (**Up, Down, Left, Right**) to move through the menu options. Press the “OK” button to select an option.

Media Control

The remote control provides various media control options:

- **Play/Pause:** Press the “OK” button.
- **Stop:** Press the “STOP” button.
- **Fast Forward:** Press the “>” button repeatedly.
- **Rewind:** Press the “<” button repeatedly.

Additional Functions

The remote control offers additional functions for enhanced user experience:

- **Subtitle:** Press the “SUBTITLE” button to enable or disable subtitles.
- **Audio Guide:** Press the “AUDIO GUIDE” button for audio assistance.
- **Display:** Press the “DISPLAY” button to view information on the screen.

Replacement Button Function



Originale	Sostituto	Originale	Sostituto
INFO [+]/REVEAL [?]	Info / Angle	<	Left
[+]	Zoom / Size	OK	OK
POWER	Power	>	Right
<<	<< / Tune-	RETURN	Back / Return
PLAY	Play / Slow	V	Down
PAUSE	Pause / Step / Freeze	TOOLS	Setup / OPT /
>>	>> / Tune+	MENU	Menu / Home
SYNC MENU	D.Menu / Top	RED	Red / Netflix / Search
STOP	Stop / Hold	GREEN	Green / APP / Repeat
THEATRE	Picture / Format	YELLOW	Yellow / YouTube / Repeat
DIGITAL	Display / Media	BLUE	Blue / Prime Video / Random
ANALOG	Smart / List	1	1
SUBTITLE [...]	Subtitle / EQ	2	2
AUDIO	Audio / Lang I/II	3	3
GUIDE	Guide / EPG / -/-	4	4
^	Up	5	5
Source	AV / Input / RDS	6	6



References

- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)