



Mandis RM-ED046 Remote Control Instructions

[Home](#) » [Mandis](#) » Mandis RM-ED046 Remote Control Instructions 



Sony RM-ED046

Contents

[1 RM-ED046 Remote Control](#)

[2 Documents / Resources](#)

[2.1 References](#)

RM-ED046 Remote Control



Original	Replacement	Original	Replacement
Input	AV / Input / RDS	Left	Left
Sync Menu	D.Menu / Top	OK	OK
Power	Power	Right	Right
<<	<< / Tune-	Return	Back / Return
Play	Play / Slow	Down	Down
Pause	Pause / Step / Freeze	Options	Setup / OPT /
>>	>> / Tune+	Home	Menu / Home
I<<	I<< / Preset-	Red	Red / Netflix / Search
Stop	Stop / Hold	Green	Green / APP / Repeat
Digital/Analog	Display / Media	Yellow	Yellow / YouTube / Repeat
[+]	Zoom / Size	Blue	Blue / Prime Video / Random
Scene	Smart / List	1	1
Audio	Audio / Lang I/II	2	2
Guide	Guide / EPG / -/--	3	3
[i+]/[?]	Info / Angle	4	4
Up	Up	5	5
		6	6



Original	Replacement	Original	Replacement
7	7		
8	8		
9	9		
[=]/Text	Text / Goto		
0	0		
[...]	Subtitle / EQ		
Vol+	Vol+		
CH+	CH+ / Page+		
Vol-	Vol-		
CH-	CH- / Page-		
Mute	Mute / Dimmer		
Back/Recall	Fav / Marker / PC		



<https://all-remote-controls.co.uk/en/Sony/1039557-60684-replacement-remote-control-for-Sony-RM-ED-046-WS0015901.html>

Documents / Resources



[Mandis RM-ED046 Remote Control](#) [pdf] Instructions
RM-ED046 Remote Control, RM-ED046, Remote Control, Control

References

- [M Replacement remote control for SONY RM-ED 046 \(WS0015901\)](#)
- [User Manual](#)