

Mandis RM-ED052 Replacement Remote Control Instructions

Contents

1

Sony RMED052

2

Documents / Resources

2.1

References



[Sony RMED052](#)



	Original		Replacement
	Input		AV / Input / RDS
	Power		Power

	[...]		Subtitle / EQ
	Audio		Audio / Lang I/II
	3D		Picture / Format
	X/Relaxed Search		Fav / Marker / PC
	Tv Pause		Shift + Pause / Step /
	<<		<< / Tune-
	Play		Play / Slow
	>>		>> / Tune+
	Title List		Sound / Title
	Rec		Rec / Rec Mode
	Pause		Pause / Step / Freeze
	Stop		Stop / Hold
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	?/i-Manual		Eject / Surround

	Sync Menu		D.Menu / Top
	SEN		Sleep / Timer
	Guide		Guide / EPG / -/-
	Up		Up
	[i+]		Info / Angle
	Left		Left
	OK		OK
	Right		Right
	Return/Back		Back / Return
	Down		Down
	Options		Setup / OPT /
	Home		Menu / Home
	Digital/Analog		Smart / List
	Exit		Exit / Cancel / Clear
	TV/Radio		TV/Radio /
	1		1
	2		2
	3		3
	4		4

	5		5
	6		6
	7		7
	8		8
	9		9
	[+]		Zoom / Size
	0		0
	[≡]/Text		Text / Goto
	Vol+		Vol+
	Prog+		CH+ / Page+
	Mute		Mute / Dimmer
	Media		Display / Media
	Vol-		Vol-
	Prog-		CH- / Page-



<https://all-remote-controls.co.uk/en/Sony/1056218-23879-replacement-remote-control-for-Sony-RM-ED-052-149199411.html>

Documents / Resources

	Mandis RM-ED052 Replacement Remote Control [pdf] Instructions RM-ED052 Replacement Remote Control, RM-ED052, Replacement Remote Control, Remote Control, Control
	Mandis RM-ED052 Replacement Remote Control [pdf] Instructions RM-ED052 Replacement Remote Control, RM-ED052, Replacement Remote Control, Remote Control, Control

References

- [M Replacement remote control for SONY RM-ED 052 \(149199411\)](#)
- [User Manual](#)