



Mandis RM-SC55 Remote Control Instructions

[Home](#) » [Mandis](#) » Mandis RM-SC55 Remote Control Instructions 

Mandis RM-SC55 Remote Control

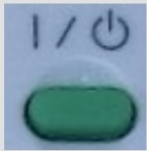 
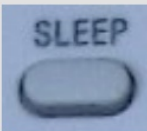 
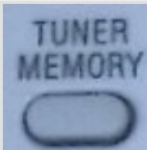 
 
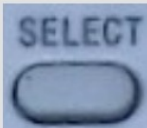 
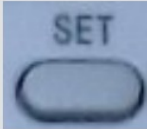 


 
 
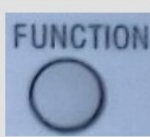 
Contents

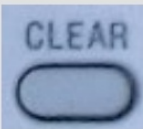 
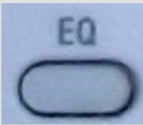 
 
 
- 1 [Remote Control Instructions](#)
- 2 [Customer Support](#)
- 3 [Documents / Resources](#)
 - 3.1 [References](#)
- 4 [Related Posts](#)

Remote Control Instructions

Original	Replacement
----------	-------------

	Power		Power
	Sleep		Sleep / Timer
	Display		Display / Media
	Tuner Memory		Zoom / Size
	Play Mode/Tuning Mode		TV/Radio /
	Folder-		CH- / Page-
	Repeat/FM		Picture / Format
	Clock/Timer		Up
	Clock/Timer Set		Down

 Audio In	 Audio / Lang I/II
 CD	 3
 Band/Tuner	  Shift + TV/Radio / Program
 Function	 D.Menu / Top
 I<</-	 I<< / Preset-
 >>I/+	 >>I / Preset+
 <</←	 << / Tune-
 >>/→	 >> / Tune+
 Play	 Play / Slow
 Pause	 Pause / Step / Freeze
 Stop	 Stop / Hold

 Clear	 Exit / Cancel / Clear
 EQ	 Subtitle / EQ
 Vol+	 Vol+
 Vol-	 Vol-
 Enter	 OK
 Disk Skip	 Fav / Marker / PC
 Folder+	 CH+ / Page+

Customer Support

<https://all-remote-controls.co.uk/en/Sony/1065500-79577-replacement-remote-control-for-Sony-RM-SC55-A1169936A.html>

 **Mandis** shop

Documents / Resources



[Mandis RM-SC55 Remote Control](#) [pdf] Instructions
RM-SC55 Remote Control, RM-SC55, Remote Control, Control

References

- [M Replacement remote control for SONY RM-SC55 \(A1169936A\)](#)
- [User Manual](#)