



Mandis RM-SC55 Replacement Remote Control Instructions

[Home](#) » [Mandis](#) » Mandis RM-SC55 Replacement Remote Control Instructions 

Contents

- [1 Mandis RM-SC55 Replacement Remote Control](#)
- [2 Product Information](#)
- [3 Product Usage Instructions](#)
- [4 OVERVEIW](#)
- [5 Documents / Resources](#)
 - [5.1 References](#)
- [6 Related Posts](#)

Mandis

Mandis RM-SC55 Replacement Remote Control



Product Information

Specifications

- **Model:** Sony RM-SC55
- **Compatibility:** Sony CD players and tuners
- **Power Source:** 2x AAA batteries (not included)
- **Dimensions:** 6.5 x 2.0 x 0.5 inches
- **Weight:** 0.1 lbs

Product Usage Instructions

Power Sleep

- The Power Sleep button is used to set a timer for the device to automatically turn off after a specific period of inactivity. Press the Power Sleep button and use the Tuning Mode buttons to set the desired sleep time. Press the button again to activate the sleep timer.

Display Tuner

- The Display Tuner button allows you to switch between different display modes on your CD player or tuner. Press the Display Tuner button repeatedly to cycle through available options.

Memory Play Mode/Tuning Mode

- The Memory Play Mode/Tuning Mode button is used to select different play modes or tuning modes on your device. Press the button to cycle through available options.

Folder Repeat/FM

- The Folder Repeat/FM button serves two functions depending on the mode. In CD mode, it allows you to repeat a specific folder. In FM mode, it switches the device to FM radio mode.

Clock Set

- The Clock Set button is used to set the clock on your device.
- Press the button and use the Audio In buttons to adjust the hours and minutes.
- Press the Clock Set button again to save the settings.

CD Band/Tuner

- The CD Band/Tuner button is used to switch between CD and tuner modes on your device. Press the button to toggle between available options.

Function II/+ /

- The Function II/+ / button is used to access secondary functions or increase values on your device. Press the button to cycle through available options or increase values.

Frequently Asked Questions (FAQ)

1. How do I replace the batteries in the remote control?

To replace the batteries, locate the battery compartment on the back of the remote control. Open it and remove the old batteries. Insert two new AAA batteries, making sure to match the positive and negative terminals correctly. Close the battery compartment securely.

2. Can I use this remote control with non-Sony devices?

No, this remote control is specifically designed for use with Sony CD players and tuners. It may not be compatible with other devices.

3. How do I adjust the volume using the remote control?

Use the Vol+ and Vol- buttons on the remote control to increase or decrease the volume on your Sony CD player or tuner.



OVERVEIW



Original	Replacement	Original	Replacement



<https://all-remote-controls.co.uk/en/Sony/1065500-79577-replacement-remote-control-for-Sony-RM-SC55-A1169936A.html>

	<p>Mandis RM-SC55 Replacement Remote Control [pdf] Instructions RM-SC55 Replacement Remote Control, RM-SC55, Replacement Remote Control, Remote Control</p>
	<p>Mandis RM-SC55 Replacement Remote Control [pdf] Instructions RM-SC55 Replacement Remote Control, RM-SC55, Replacement Remote Control, Remote Control, Control</p>

References

- [M Replacement remote control for SONY RM-SC55 \(A1169936A\)](#)
- [User Manual](#)