



Mandis RM-SUXF227DAB JVC Remote Control Instructions

[Home](#) » [Mandis](#) » Mandis RM-SUXF227DAB JVC Remote Control Instructions 

Mandis RM-SUXF227DAB JVC Remote Control Instructions



Contents
















[1 Remote Control](#)



 

















 

[2 Documents / Resources](#)

[2.1 References](#)

[3 Related Posts](#)

Remote Control

Original	Replacement
 Power	 Power
 CD	3
 Open/Close	 Eject / Surround
 USB	8
 Source	 AV / Input / RDS
 FM/DAB+	6
 PRG/Memory	 Setup / OPT /
 Menu/Repeat	 Menu / Home
 <</Tune-	 << / Tune-


 <p>Play</p>	 <p>Play / Slow</p>
 <p>Pause</p>	 <p>Pause / Step / Freeze</p>
 <p>>>/>> </p>	 <p>>> / Tune+</p>
 <p>Fold-</p>	 <p>CH- / Page-</p>
 <p>Fold+</p>	 <p>CH+ / Page+</p>
 <p>Info/Random</p>	 <p>Info / Angle</p>
 <p>10-/Tun-</p>	 <p>Left</p>
 <p>10+/Tun+</p>	 <p>Right</p>
 <p>Stop/Auto</p>	 <p>Stop / Hold</p>
 <p>Vol-</p>	 <p>Vol-</p>
 <p>Vol+</p>	 <p>Vol+</p>

 <p>EQ/Clock</p>	 <p>Subtitle / EQ</p>
 <p>Mute/Sleep</p>	 <p>Mute / Dimmer</p>

<https://all-remote-controls.co.uk/en/JVC/1066740-96658-replacement-remote-control-for-JVC-RM-SUXF227DAB.html>



Documents / Resources

	<p>Mandis RM-SUXF227DAB JVC Remote Control [pdf] Instructions RM-SUXF227DAB JVC Remote Control, RM-SUXF227DAB, JVC Remote Control, Remote Control, Control</p>
---	---

References

- [Replacement remote control for JVC RM-SUXF227DAB](#)
- [User Manual](#)