

Mandis RM-SUXP5R JVC Remote Control



Mandis RM-SUXP5R JVC Remote Control Instructions

 
[Home](#) » [Mandis](#) » Mandis RM-SUXP5R JVC Remote Control Instructions 

Contents

- [1 Mandis RM-SUXP5R JVC Remote Control](#)
- [2 Product Information](#)
- [3 Product Usage Instructions](#)
- [4 OVERVIEW](#)
- [5 BUTTON REPLACEMENT](#)
- [6 Documents / Resources](#)
 - [6.1 References](#)
- [7 Related Posts](#)



Mandis RM-SUXP5R JVC Remote Control

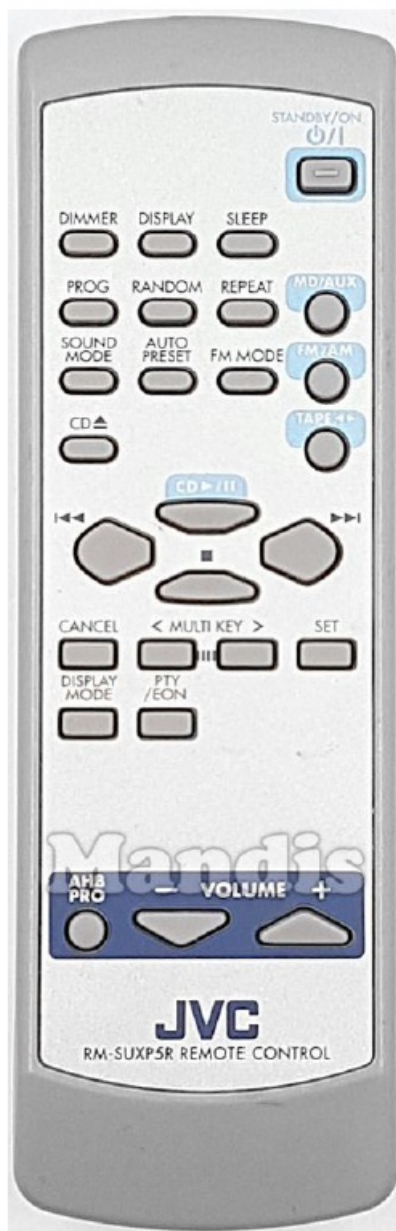

Product Information

The JVC RM-SUXP5R is a remote control designed for use with JVC audio systems. It provides convenient control over various functions and features of the audio system.

Specifications

- Model: RM-SUXP5R
- Compatible with: JVC audio systems
- Control Functions: Standby/On, MD/AUX, FM/AM, Tape, Play/Pause CD, Dimmer Display, Sleep, Prog Random, Repeat, Sound Mode, FM Mode, Auto Preset, II Cancel, Multi Key, CD Eject, Set Display Mode, PTY/EON, AHB Pro, Volume+, Volume-, Recharge, Stop, >>I Exit, Left Pre Ch, Right Menu, Format, AV Subt Vol +, Vol -

Product Usage Instructions

Installation

To use the JVC RM-SUXP5R remote control, follow these steps:

1. Remove the battery compartment cover on the back of the remote control.
2. Insert the required batteries into the battery compartment, ensuring correct polarity.
3. Close the battery compartment cover securely.
4. Aim the remote control towards the audio system and ensure there are no obstructions between the remote and the system.

Basic Functions

The JVC RM-SUXP5R remote control provides control over various basic functions of the audio system. Here are some key functions:

- **Standby/On:** Press this button to turn the audio system on or off.
- **MD/AUX:** Use this button to select the MD or AUX input source on the audio system.
- **FM/AM:** Press this button to switch between FM and AM radio modes.
- **Tape:** Use this button to control tape functions such as play, pause, and stop.
- **Play/Pause CD:** Press this button to start or pause CD playback.
- **Dimmer Display:** Adjusts the brightness of the display on the audio system.
- **Sleep:** Sets a sleep timer for the audio system to automatically turn off after a specified time.

Advanced Functions

 
The JVC RM-SUXP5R remote control also offers control over various advanced functions of the audio system. Here are some key functions:

- **Prog Random:** Enables random playback of programmed tracks on a CD.
- **Repeat:** Sets the audio system to repeat the currently playing track or all tracks.
- **Sound Mode:** Allows you to select different sound modes for audio playback.
- **FM Mode:** Switches between different FM radio modes.
- **Auto Preset:** Automatically searches and presets available radio stations.
- **II Cancel:** Stops the playback of a cassette tape.
- **Multi Key:** Provides access to additional functions and features via multi-key combinations.

FAQ (Frequently Asked Questions)

- Q: Can the JVC RM-SUXP5R remote control be used with other audio systems?
A: No, the JVC RM-SUXP5R remote control is specifically designed for use with JVC audio systems and may not be compatible with other systems.
- Q: How do I replace the batteries in the JVC RM-SUXP5R remote control?
A: To replace the batteries, follow the installation steps mentioned in the "Installation" section above.
- Q: Can I control the volume using the JVC RM-SUXP5R remote control?
A: Yes, the remote control provides volume control buttons (Volume+ and Volume-) to adjust the audio system's volume.

OVERVIEW

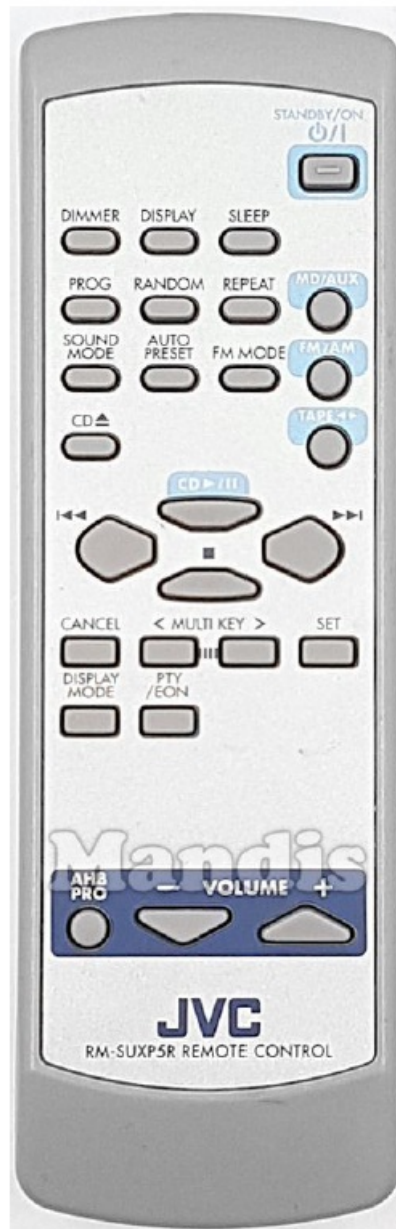


 





 

 

 
 


 



 



 

 

 


 

 

 




 
 
 

 





 


 







BUTTON REPLACEMENT

Original

Recharge

	Standby / On		Power
	MD/AUX		Red
	FM/AM		Green
	Tape <>		Blue
	Play/Pause CD		Play
	Play/Pause CD		Pause
	Play/Pause CD		Yellow
	Dimmer		Smart
	Display		Info
	Sleep		Sleep
	Prog		Shift + Sleep
	Random		Media
	Repeat		Text
	Sound Mode		Dual
	FM Mode		TV/R
	Auto Preset		List
	I<<		I<<
	Stop		Stop
	>>I		>>I
	Cancel		Exit
	< Multi Key		Left
	CD Eject		Pre Ch
	Multi Key >		Right
	Set		Menu
	Display Mode		Format
	PTY/EON		AV
	AHB Pro		Subt
	Volume+		Vol +
	Volume-		Vol -

Documents / Resources



[Mandis RM-SUXP5R JVC Remote Control](#) [pdf] Instructions

RM-SUXP5R JVC Remote Control, RM-SUXP5R, JVC Remote Control, Remote Control, Control

References

- [M Télécommandes pour tous les appareils](#)
- [M Télécommande qui remplace JVC RM-SUXP5R](#)
- [User Manual](#)