



Mandis RM-SUXP5R Remote Control Instructions

[Home](#) » [Mandis](#) » Mandis RM-SUXP5R Remote Control Instructions 



RM-SUXP5R Remote Control Instructions

Contents


[1 RM-SUXP5R Remote
Control](#)

[2 Documents / Resources](#)

[2.1 References](#)

RM-SUXP5R Remote Control

[JVC RM-SUXP5R](#)

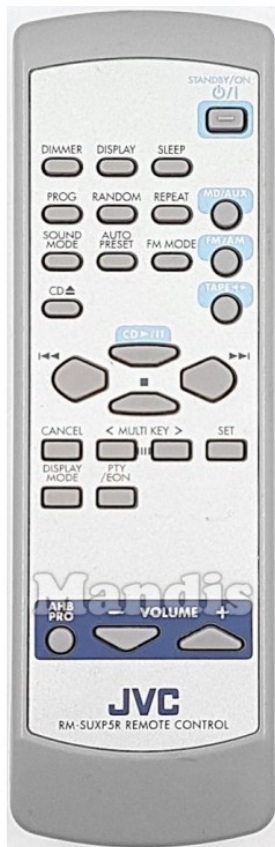

Original	Rechange	Original	Rechange
Standby / On	Power	Stop	Stop
MD/AUX	Red	>>I	>>I
FM/AM	Green	Cancel	Exit
Tape <>	Blue	< Multi Key	Left
Play/Pause CD	Play	CD Eject	Pre Ch
Play/Pause CD	Pause	Multi Key >	Right
Play/Pause CD	Yellow	Set	Menu
Dimmer	Smart	Display Mode	Format
Display	Info	PTY/EON	AV
Sleep	Sleep	AHB Pro	Subt
Prog	Shift + Sleep	Volume+	Vol +
Random	Media	Volume-	Vol -
Repeat	Text		
Sound Mode	Dual		
FM Mode	TV/R		
Auto Preset	List		
I<<	I<<		



<https://tout-telecommandes.fr/fr/JVC/1063380-79072-telecommande-de-remplacement-pour-JVC-RM-SUXP5R.html>



Documents / Resources



[Mandis RM-SUXP5R Remote Control](#) [pdf] Instructions
RM-SUXP5R, RM-SUXP5R Remote Control, Remote Control, Control

References

- [Télécommande qui remplace JVC RM-SUXP5R](#)
- [User Manual](#)