



# Mandis RM932 Replacement Remote Control Instructions

[Home](#) » [Mandis](#) » Mandis RM932 Replacement Remote Control Instructions 

## Contents

- [1 Mandis RM932 Replacement Remote Control](#)
- [2 Product Usage Instructions](#)
- [3 OVERVIEW](#)
- [4 BUTTON FUNCTION](#)
- [5 Documents / Resources](#)
  - [5.1 References](#)
- [6 Related Posts](#)



**Mandis RM932 Replacement Remote Control**



## Specifications

- Product: Sony RM932-TV
- Power Source: 2x AAA batteries (not included)
- Color: Original Blue
- Number of Buttons: 36
- Compatibility: Compatible with Sony televisions

## Product Usage Instructions

### Power On/Off

To power on the Sony RM932-TV, press the red button labeled “Power”. To power off the remote, press the same red button again.

### Channel Navigation

Use the numbered buttons (1-9, 0) to enter the desired channel number. Press the “Recall” button to switch back

to the previously tuned channel.

## **Volume Control**

To adjust the volume, use the “+” and “-” buttons located near the numeric keypad. Press “+” to increase the volume and “-” to decrease it.

## **Input Selection**

To select the desired input source, press the corresponding AV button followed by the input number (1-9, 0). For example, to switch to AV input 3, press “AV 3”.

## **Navigation Buttons**

The navigation buttons (Up, Down, Right, Left) can be used to navigate menus and on-screen options. Press the desired direction to move the cursor or highlight an item.

## **OK and Playback Controls**

The “OK” button is used to confirm selections and activate menu options. The “Play”, “Pause”, and “Stop” buttons are used for media playback. The “>>” button is used for fast-forwarding.

## **Frequently Asked Questions (FAQ)**

Q: How do I replace the batteries?

A: To replace the batteries, locate the battery compartment on the back of the remote. Open the compartment and insert two AAA batteries, ensuring the correct polarity. Close the compartment securely.

Q: Is the Sony RM932-TV compatible with all Sony televisions?

A: Yes, the Sony RM932-TV is designed to be compatible with all Sony televisions.

## **OVERVIEW**



## BUTTON FUNCTION

Original		Replacement	
	Power		Power
	Source/[+]		AV
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	[i+]/[?]		Info
	-/-/Recall		Guide
	Red/♪		Red
	Green/※		Green
	Yellow		Yellow

	Blue/[+]		Blue
	[ ]		Subt
	[≡]		Text
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok
	Play		Play
	Pause		Pause
	Stop		Stop
	>>		>>
	<<		<<
	Menu		Menu
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute


	Prog+		Ch +
	Prog-		Ch -

	Power		Power
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok
	Play		Play
	Pause		Pause
	Stop		Stop
	>>		>>
	<<		<<

	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	-/--/Recall		Guide
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok
	Play		Play
	Pause		Pause
	Stop		Stop
	>>		>>
	<<		<<
	Rec		Rec
	Prog+		Ch +
	Prog-		Ch -

<https://all-remote-controls.co.uk/en/Sony/1056050-21530-replacement-remote-control-for-Sony-RM-932-147670212.html>

## Documents / Resources

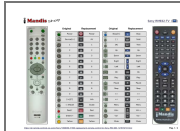

### [Mandis RM932 Replacement Remote Control](#) [pdf] Instructions

RM932 Replacement Remote Control, RM932, Replacement Remote Control, Remote Control, Control

## References

- [User Manual](#)