



Mandis RMANU191 Original Remote Control Instruction Manual

[Home](#) » [Mandis](#) » Mandis RMANU191 Original Remote Control Instruction Manual 

Contents

- [1 Mandis RMANU191 Original Remote Control](#)
- [2 Product Information](#)
- [3 Product Usage Instructions](#)
- [4 Product Overview](#)
- [5 Remote Using Instructions](#)
- [6 Documents / Resources](#)
 - [6.1 References](#)

Mandis

Mandis RMANU191 Original Remote Control



Product Information

Specifications

- **Power:** Yes
- **TV Function:** Yes
- **Bluetooth:** Yes

Frequently Asked Questions

- **Q:** How do I turn off the product?
 - **A:** Press the Power button to turn off the product.
- **Q:** Can I connect multiple Bluetooth devices to the product simultaneously?
 - **A:** No, the product can only be connected to one Bluetooth device at a time.
- **Q:** How do I adjust the bass and treble levels?
 - **A:** Use the Bass+ and Bass- buttons for bass control, and the Treble+ and Treble- buttons for treble control.

Product Usage Instructions

Power

- To turn on the product, press the Power button.

TV Function

- To activate the TV function, press the TV Function button.

Bluetooth Pairing

To pair the product with a Bluetooth device, follow these steps:

1. Make sure the Bluetooth device is in pairing mode.
2. Press and hold the Bluetooth button on the product until the LED indicator starts blinking.
3. On your Bluetooth device, search for available devices and select the product.
4. If prompted, enter the PIN code provided in the user manual.
5. Once connected, the LED indicator will stop blinking.

Bass and Treble Adjustment

- To adjust the bass and treble levels, use the Bass+ and Bass- buttons for bass control, and the Treble+ and Treble- buttons for treble control.

Recharge

- To recharge the product, connect it to a power source using the provided charging cable.

Shift Function

The Shift function allows you to access additional features by combining it with other buttons. Follow the instructions below:

- **Shift + Power:** Special power mode.
- **Shift + Vol +:** Increase volume rapidly.
- **Shift + Vol -:** Decrease volume rapidly.
- **Shift + Mute:** Mute/unmute with a single button press.
- **Shift + Ch +:** Go to the next channel quickly.
- **Shift + Ch -:** Go to the previous channel quickly.

Options

- To access the options menu, press the Options button.

Media

- To access media features, press the Media button.

Smart Function

- To activate the smart function, press the Smart button.

Product Overview



Remote Using Instructions

Original / Recharge

Original		Recharge		Original		Recharge	
	Power		Power		Vol-		Vol -
	Power Tv		Shift + Power		Mute		Mute
	Function		Options				
	Bluetooth		Media				
	Pairing		Smart				
	Vol+ Tv		Shift + Vol +				
	Vol- Tv		Shift + Vol -				
	Mute Tv		Shift + Mute				
	Prog+ Tv		Shift + Ch +				
	Prog- Tv		Shift + Ch -				
	Source Tv		AV				
	Surround		Dual				
	Bass+		Ch +				
	Bass-		Ch -				
	Treble+		>>I				
	Treble-		I<<				
	Vol+		Vol +				

<https://tout-telecommandes.fr/fr/Sony/1058223-66014-telecommande-de-remplacement-pour-Sony-RM-ANU-191-149271111.html>

Documents / Resources

	Mandis RMANU191 Original Remote Control [pdf] Instruction Manual RMANU191, RMANU191 Original Remote Control, Original Remote Control, Remote Control, Control
---	--

References

- [M Télécommande qui remplace SONY RM-ANU 191 \(149271111\)](#)
- [User Manual](#)