



Mandis RMANU191 Replacement Remote Control Instructions

[Home](#) » [Mandis](#) » Mandis RMANU191 Replacement Remote Control Instructions 



RMANU191 Replacement Remote Control Instructions

Contents

- [1 RMANU191 Replacement Remote Control](#)
- [2 Documents / Resources](#)
 - [2.1 References](#)
- [3 Related Posts](#)

RMANU191 Replacement Remote Control

Sony RMANU191



	Original	Rechange		Original	Rechange
	Power	 Power		Vol-	 Vol -
	Power Tv	 Shift + Power		Mute	 Mute
	Function	 Options			
	Bluetooth	 Media			
	Pairing	 Smart			
	Vol+ Tv	 Shift + Vol +			
	Vol- Tv	 Shift + Vol -			
	Mute Tv	 Shift + Mute			
	Prog+ Tv	 Shift + Ch +			
	Prog- Tv	 Shift + Ch -			
	Source Tv	 AV			
	Surround	 Dual			
	Bass+	 Ch +			
	Bass-	 Ch -			
	Treble+	 >>I			
	Treble-	 I<<			
	Vol+	 Vol +			



<https://tout-telecommandes.fr/fr/Sony/1058223-66014-telecommande-de-remplacement-pour-Sony-RM-ANU-191-149271111.html>

Documents / Resources

	Mandis RMANU191 Replacement Remote Control [pdf] Instructions RMANU191 Replacement Remote Control, RMANU191, Replacement Remote Control, Remote Control, Control
	Mandis RMANU191 Replacement Remote Control [pdf] Instructions RMANU191 Replacement Remote Control, RMANU191, Replacement Remote Control, Remote Control, Control

References

- [M Télécommande qui remplace SONY RM-ANU 191 \(149271111\)](#)
- [User Manual](#)