



Mandis RMF-TX220E Replacement Remote Control Instructions

[Home](#) » [Mandis](#) » Mandis RMF-TX220E Replacement Remote Control Instructions 

Contents

- [1 Mandis RMF-TX220E Replacement Remote Control Instructions](#)
- [2 Product Information](#)
- [3 Product Usage Instructions](#)
- [4 FAQ](#)
- [5 Documents / Resources](#)
 - [5.1 References](#)
- [6 Related Posts](#)



Mandis RMF-TX220E Replacement Remote Control Instructions



Original	Rechange
	Power
	Input
	Digital/Analog
	Tv/Radio
	Exit
	Ext.Box Menu
	1
	2
	3
	4
	5
	6
	7
	8
	9
	0
	[i+]/[?] Info

Original	Rechange
	[=]
	Google Play
	Netflix
	Red
	Green
	Yellow
	Blue
	Guide
	Action Menu
	Back
	APPS
	TV
	Home
	Up
	Down
	Right
	Left



Original		Rechange	
	OK		Ok
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute
	Recall		Pre Ch
	Prog+		Ch +
	Prog-		Ch -
	<<		<<
	Play		Play
	>>		>>
	I<<		I<<
	Pause		Pause
	>>I		>>I
	Rec		Rec
	Stop		Stop
	Title List		List
	Audio		Dual
	[...]		Subt
	Help		Format

- **Power**

To turn the device on or off, press the “Power” button.

- **Input**

Use the number buttons (1-9, 0) to input the desired channel or menu option.

- **Digital/Analog TV/Radio**

This button allows you to switch between digital and analog TV or radio channels.

- **Exit**

Press the “Exit” button to exit from the current menu or screen.

- **External Box Menu**

Access the menu options of an external box connected to the device using the “Ext.Box Menu” button.

- **AV Options**

Press the “AV Options” button to access audio and video options.

- **Digital Menu**

Use the number buttons (1-9, 0) to navigate and select options in the digital menu.

- **Info**

Press the “Info” button to display information about the current program or content.

- **Google Play**

This button provides access to the Google Play store for downloading apps and content.

- **Netflix**

Press the “Netflix” button to launch the Netflix app.

- **Red, Green, Yellow, Blue Buttons**

These colored buttons can be used for various functions depending on the context. Please refer to the specific instructions provided.

- **Guide**

Press the “Guide” button to access the program guide.

- **Action Menu**

Use the “Action Menu” button to access additional options and settings for the current program or content.

- **Back**

Press the “Back” button to go back to the previous screen or menu.

- **TV Home**

This button takes you to the home screen of the TV interface.

- **Up, Down, Right, Left Buttons**

Use these directional buttons to navigate through menus and options.

- **Text**

The “Text” button is used for interactive services that provide additional information or content while watching TV.

- **Media**

Press the “Media” button to access media playback options and features.

- **Shift + Smart**

Press and hold the “Shift” button and then press the “Smart” button to activate a secondary function or feature.

- **3D**

Press the “3D” button to enable or disable 3D viewing mode if supported by the TV.

- **OK**

The “OK” button is used to confirm selections or perform actions.

- **Volume Control**

Use the “Vol+” and “Vol-” buttons to increase or decrease the volume respectively. Press the “VolMute” button to mute or unmute the sound.

- **Recall**

Press the “Recall” button to switch between the current and previous channels.

- **Program Selection**

Use the “Prog+” and “Prog-” buttons to navigate through available channels.

- **Subtitle Format**

Press the “Subt Format” button to access subtitle options and formats.

FAQ

Q: Where can I find a replacement remote control for Sony RMF-TX220E?

A: You can find a replacement remote control for Sony RMF-TX220E at [this website](https://tout-telecommandes.fr/fr/Sony/1058790-85280-telecommande-de-remplacement-pour-Sony-RMF-TX220E-149346621.html).

Sony RMF-TX220E

<https://tout-telecommandes.fr/fr/Sony/1058790-85280-telecommande-de-remplacement-pour-Sony-RMF-TX220E-149346621.html>

Documents / Resources



[Mandis RMF-TX220E Replacement Remote Control](#) [pdf] Instructions

RMF-TX220E Replacement Remote Control, RMF-TX220E, Replacement Remote Control, Remote Control

References

- [M Télécommande qui remplace SONY RMF-TX220E \(149346621\)](#)
- [User Manual](#)