



Mandis RMT-D141P Remote Remote Control Instructions

[Home](#) » [Mandis](#) » Mandis RMT-D141P Remote Remote Control Instructions 

Mandis RMT-D141P Remote Remote Control Instructions



Contents

1 Remote Remote Control

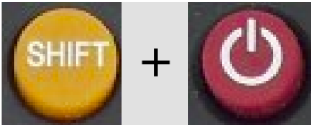 
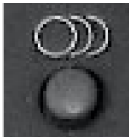 
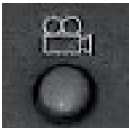 
2 Documents / Resources

 
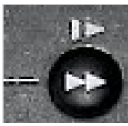 
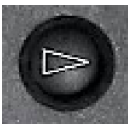 
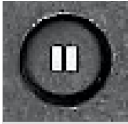 
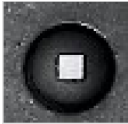 
2.1 References

3 Related Posts

Remote Remote Control

Original	Replacement
----------	-------------

	Power		Power
	Power Tv		Shift + Power
	Eject		Eject
	Surd		Options
	Picture Mode		Format
	O)))		Dual
	[...]		Subt
	Vol+		Vol+
	Vol-		Vol-
	Clear		Exit
	Camera		3D
	Tv/DVD		Media

	Search Mode		TV/R
	I<<		I<<
	>>I		>>I
	<</<I		<<
	I>/>>		>>
	Replay		List
	Play		Play
	Pause		Pause
	Stop		Stop
	Up		Up
	Left		Left
	Enter		Ok

	Right		Right
	Down		Down
	Display		Info
	Top Menu		D. Menu
	Menu		Menu
	Return		Back

<https://all-remote-controls.co.uk/en/Sony/1061720-31129-replacement-remote-control-for-Sony-RMT-D141P-147716911.html>



Mandis SHOP

Documents / Resources

	Mandis RMT-D141P Remote Remote Control [pdf] Instructions RMT-D141P Remote Remote Control, RMT-D141P, Remote Remote Control, Remote Control
---	---

References

- [User Manual](#)

