



Mandis RMT-D141P Replacement Remote Control Instructions

[Home](#) » [Mandis](#) » Mandis RMT-D141P Replacement Remote Control Instructions 

Contents

- [1 Mandis RMT-D141P Replacement Remote Control](#)
- [2 Product Information](#)
- [3 Product Usage Instructions](#)
- [4 Documents / Resources](#)
 - [4.1 References](#)
- [5 Related Posts](#)



Mandis RMT-D141P Replacement Remote Control



Product Information

Specifications

- **Product Name:** Sony RMT-D141P
- **Model Number:** RMT-D141P
- **Compatibility:** Sony TV/DVD devices
- **Color:** Black
- **Power Source:** 2 x AAA batteries (not included)
- **Dimensions:** 6.2 x 1.8 x 0.8 inches
- **Weight:** 3.2 ounces

Product Usage Instructions

Power

To turn on the TV or DVD device, press the “Power” button.

Eject

To eject a disc from the DVD player, press the “Eject” button.

Volume Control

To increase the volume, press the “Vol+” button. To decrease the volume, press the “Vol-” button.

Picture Mode

To change the picture mode, press the “Picture Mode” button. Use the arrow buttons to navigate through available picture modes, and press “Enter” to select.

Search Mode

To activate the search mode, press the “Search Mode” button. Use the arrow buttons to navigate through the search options, and press “Enter” to start the search.

Camera

The “Camera” button is used for camera-related functions specific to compatible devices. Please refer to the device manual for more information.

TV/DVD

The “TV/DVD” button is used to switch between TV and DVD modes on compatible devices. Press the button to toggle between modes.

FAQ

Q: Where can I purchase a replacement remote control for Sony RMT-D141P?

A: You can purchase a replacement remote control for Sony RMT-D141P from the following website:

[Replacement Remote Control for Sony RMT-D141P](https://all-remote-controls.co.uk/en/Sony/1061720-31129-replacement-remote-control-for-Sony-RMT-D141P-147716911.html)



Original	Replacement	Original	Replacement
	Power		Replay
	Power Tv		List
	Eject		Play
	Surr		Pause
	Picture Mode		Stop
	O)))		Up
	[...]		Left
	Vol+		Enter
	Vol-		Ok
	Clear		Right
	Camera		Down
	Tv/DVD		Display
	Search Mode		Info
	I<<		Top Menu
	>>I		D. Menu
	<</>I		Menu
	I/>>		Return
			Back



<https://all-remote-controls.co.uk/en/Sony/1061720-31129-replacement-remote-control-for-Sony-RMT-D141P-147716911.html>



[Mandis RMT-D141P Replacement Remote Control](#) [pdf] Instructions

RMT-D141P Replacement Remote Control, RMT-D141P, Replacement Remote Control, Remote Control

References

- [M Replacement remote control for SONY RMT-D141P \(147716911\)](#)
- [User Manual](#)