




Mandis RMT-D248P Remote Control Instructions

[Home](#) » [Mandis](#) » Mandis RMT-D248P Remote Control Instructions 

Contents

- [1 Mandis RMT-D248P Remote Control](#)
- [2 Product Information](#)
- [3 Specifications](#)
- [4 Product Usage Instructions](#)
- [5 Key Function](#)
- [6 Documents / Resources](#)
 - [6.1 References](#)
- [7 Related Posts](#)

Mandis

Mandis RMT-D248P Remote Control



Product Information

The Sony RMT-D248P is a remote control designed for use with Sony devices. It is a replacement remote control that can be used as a substitute for the original remote control.

Specifications

- Model: RMT-D248P
- Compatibility: Sony devices
- Power Source: 2 AAA batteries (not included)

Product Usage Instructions

Power and Eject

To turn on or off the device, press the “Power” button. To eject a disc or media, press the “Eject” button.

Navigation and Selection

Use the arrow buttons (Left, Right, Up, Down) to navigate through menus and options. Press the “Enter” or “Ok” button to select an item.

Media Controls

Use the “Play”, “Pause”, “Stop”, and “Rec” buttons to control media playback and recording functions.

Volume and Channel Controls

Adjust the volume by pressing the “Vol+” or “Vol-” buttons. Change channels using the “Prog+” or “Prog-” buttons.

Additional Functions

The remote control offers additional functions such as TV controls, subtitle and audio options, formatting options, and access to menus and guides. Use the respective buttons to access these features.

FAQ

Q: How do I replace the batteries?

A: To replace the batteries, open the battery compartment located on the back of the remote control. Insert two AAA batteries, ensuring they are correctly aligned with the polarity markings. Close the battery compartment.

Q: Can this remote control be used with non-Sony devices?

A: This remote control is specifically designed for use with Sony devices and may not be compatible with other brands.

Key Function

Original / Replacement



Original	Replacement
	Power
	Eject
	HDD
	DVD
	1
	2
	3
	4
	5
	6
	7
	8
	9
	0
	Audio
	Clear
	Prog+

Original	Replacement
	Prog-
	Input
	TV/DVD
	Subtitle
	Angle
	Text
	Menu
	Red
	Green
	Yellow
	Blue
	System Menu
	Title List/ Top Menu
	Guide
	Timer
	Info
	Up





Original	Replacement
	Left
	Enter
	Right
	Down
	Exit / Return
	Display
	I << / Page -
	←
	→
	>> I / Page +
	<< / Day -
	Play
	>> / Day +
	Tv Pause
	Pause
	Stop
	Rec

Original	Replacement
	Rec Stop
	HUB HDD/DVD
	Rec mode
	Zoom
	Play mode
	Vol+ TV
	Vol- TV
	Prog+ TV
	Prog- TV
	Power TV
	Source TV



Documents / Resources



[Mandis RMT-D248P Remote Control](#) [pdf] Instructions
RMT-D248P Remote Control, RMT-D248P, Remote Control, Control

References

- [M Replacement remote control for SONY RMT-D 248 P \(148016711\)](#)
- [User Manual](#)