



Mandis RMT-TX200E Remote Control Instructions

[Home](#) » [Mandis](#) » Mandis RMT-TX200E Remote Control Instructions 

Contents

- [1 Mandis RMT-TX200E Remote Control Instructions](#)
- [2 Specifications](#)
- [3 Product Usage](#)
- [4 OVERVIEW](#)
- [5 REPLACEMENT PARTS](#)
- [6 BUTTON FUNCTIONS](#)
- [7 Documents / Resources](#)
 - [7.1 References](#)
- [8 Related Posts](#)



Mandis RMT-TX200E Remote Control Instructions



Specifications

- Model: RMT-TX200E
- Compatibility: Sony TVs
- Power: 2 AAA batteries (not included)
- Wireless Range: Up to 10 meters
- Dimensions: 20cm x 5cm x 2cm
- Weight: 100g

Product Usage

Power and Navigation:

- To power on/off the TV, press the Power button.
- Use the numeric keypad (1-9, 0) to enter channel numbers or menu options.
- The Exit button can be used to exit menus or return to previous screens.
- The TV/Radio Sync button switches between TV and radio modes.
- The Menu button opens the TV menu for settings and options.
- Press the Source button to select input sources.
- Use the Arrow buttons (Up, Down, Left, Right) for navigation in menus and settings.

Media Control:

- The AV Media Smart button provides access to media playback options.
- Press the Play, Pause, and Stop buttons to control media playback.
- The Red, Green, Yellow, and Blue buttons may have specific functions depending on the context.

Additional Features:

- Use the Sleep button to activate the sleep timer for automatic TV shutdown.
- The Guide button provides access to an electronic program guide.
- Press the Options button for additional options related to the current content.
- Utilize the 3D button for activating 3D mode if supported by the TV.
- The Text button can be used to access teletext services if available.
- Press the Info button for displaying information about the current content.
- Use the Volume and Channel buttons to adjust audio and change channels.
- The Mute button can be used to mute/unmute the TV audio.

Frequently Asked Questions (FAQ):

- 1. How do I replace the batteries?
 - To replace the batteries, open the battery compartment on the back of the remote and insert two AAA batteries, making sure to match the polarity (+/-) correctly. Close the compartment securely.
- 2. How do I sync the remote with my TV?
 - The remote does not require any syncing process. It is compatible with Sony TVs out of the box. Simply point the remote towards the TV and start using it.
- 3. What should I do if some buttons are not functioning?
 - If some buttons are not working, check if there are any obstructions between the remote and the TV. Ensure that you are within the wireless range (up to 10 meters). If the issue persists, try replacing the batteries with new ones.
- 4. Can I use this remote with other devices?
 - This remote is specifically designed for use with Sony TVs and may not be compatible with other devices. It is recommended to use the remote as intended for optimal performance.
- 5. Where can I purchase a replacement remote?
 - You can purchase a replacement remote for the Sony RMT-TX200E from the following website: [Replacement Remote for Sony RMT-TX200E](#)

OVERVIEW

Sony RMT-TX200E



REPLACEMENT PARTS

Original		Rechange	
	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Exit		Exit
	Tv/Radio		TV/R
	Sync Menu		Menu
	Source		AV
	Netflix		Media
	Digital/Analog		Smart

 Action Menu	 +  Shift + Menu
 Home	 Sleep
 Guide	 Guide
 Back	 Back
 TV	 Options
 Recall	 Pre Ch
 Help	 3D
 [≡]	 Text
 [i+]/[?]	 Info
 Red	 Red
 Green	 Green
 Yellow	 Yellow
 Blue	 Blue
 OK	 Ok
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 Vol+	 Vol +
 Vol-	 Vol -
 Prog+	 Ch +
 Prog-	 Ch -
 Audio	 Dual
 [...]	 Subt
 Title List	 Format
 Play	 Play
 Pause	 Pause
 Stop	 Stop
 >>	 >>
 <<	 <<
 I<<	 I<<
 >>I	 >>I
 Rec	 Rec
 Mute	 Mute

BUTTON FUNCTIONS



<https://tout-telecommandes.fr/fr/Sony/1039520-79184-telecommande-de-remplacement-pour-Sony-RMT-TX-200-E-149316111.html>

Documents / Resources

	Mandis RMT-TX200E Remote Control [pdf] Instructions RMT-TX200E Remote Control, RMT-TX200E, Remote Control, Control
	Mandis RMT-TX200E Remote Control [pdf] Instructions RMT-TX200E Remote Control, RMT-TX200E, Remote Control, Control

References

-  [Télécommande qui remplace SONY RMT-TX 200 E \(149316111\)](#)
- [User Manual](#)