



# Mandis RMT-TX200E Replacement Remote Control Instructions

[Home](#) » [Mandis](#) » Mandis RMT-TX200E Replacement Remote Control Instructions 

## Contents

- [1 Mandis RMT-TX200E Replacement Remote Control](#)
- [2 Product Information](#)
- [3 Product Usage Instructions](#)
- [4 \[...\]](#)
- [5 >>](#)
  - [5.1 FAQ](#)
  - [5.2 PRODUCT OVERVIEW](#)
  - [5.3 FUNCTION](#)
- [6 Documents / Resources](#)
  - [6.1 References](#)

# Mandis

**Mandis RMT-TX200E Replacement Remote Control**



## Product Information

### Specifications

- Model: Sony RMT-TX200E
- Compatibility: Sony TVs and other compatible devices
- Power: Requires 2 AAA batteries (not included)
- Connectivity: Digital and Analog
- Remote Control Range: Up to 10 meters

### Product Usage Instructions

#### Power

To turn the device on or off, press the “Power” button located on the remote control.

#### TV/Radio Sync

To switch between TV and Radio modes, press the “TV/Radio Sync” button.

#### Menu

To access the menu options, press the “Menu” button.

#### Source

To select the input source, use the “Source” button.

#### Netflix

To access Netflix, press the “Netflix” button.

## **Digital/Analog**

To switch between digital and analog signals, use the “Digital/Analog” button.

## **Recharge**

To recharge the remote control, connect it to a power source using the provided charging cable.

## **Action Menu**

The “Action Menu” button provides quick access to various actions and settings. Press it to open the action menu.

## **Home**

The “Home” button takes you to the home screen of your TV or device.

## **Guide**

The “Guide” button displays the TV program guide.

## **Back**

The “Back” button allows you to navigate back to the previous screen or menu.

## **TV Recall**

Press the “TV Recall” button to switch to the previously viewed TV channel.

## **Help**

If you need assistance, press the “Help” button for on-screen help.

## **Red, Green, Yellow, Blue**

These colored buttons are used for various functions depending on the TV or device you are using.

## **OK**

The “OK” button is used to confirm selections or execute actions.

## **Up, Down, Right**

These directional buttons are used for menu navigation and scrolling.

## **Shift + Menu**

Pressing the “Shift” and “Menu” buttons simultaneously may activate additional options or features.

### **Sleep**

The “Sleep” button is used to set a sleep timer for the device.

### **Options**

The “Options” button provides access to additional settings and options.

### **Pre Ch**

The “Pre Ch” button allows you to switch between the previous and current channels quickly.

### **3D**

If your TV or device supports 3D content, use the “3D” button to enable or disable 3D mode.

### **Text**

The “Text” button is used to access teletext or closed captioning on compatible TVs.

### **Info**

The “Info” button displays information about the current program or content.

### **Left, Vol+, VolProg+**

These buttons control the volume and program selection.

### **ProgAudio**

The “ProgAudio” button allows you to switch between different audio programs or languages.

### **[...]**

The “[...]” button may provide additional options or features depending on the TV or device.

### **Title List**

Press the “Title List” button to access a list of available titles or recordings.

### **Play, Pause, Stop**

These buttons control playback functions.

>>

The “>>” button is used for fast forward or skip functions.

## **I Rec**

Press the “I Rec” button to start recording (if supported by your device).

## **Mute**

The “Mute” button mutes or unmutes the audio.

## **FAQ**

### **Q: How do I replace the batteries in the remote control?**

A: To replace the batteries, open the battery compartment on the back of the remote and insert two AAA batteries, making sure to match the polarity (+/-) correctly.

### **Q: Can I use this remote with other brands of TVs?**

A: The Sony RMT-TX200E remote control is designed for use with Sony TVs and may not be compatible with other brands.



 
 

 

 
 
 
 
 
 



 

 

 
 
 

 
 
 

 

 
 
 
### **Q: Where can I find a replacement remote control?**

A: You can find a replacement remote control for the Sony RMT-TX200E on the following website: [Replacement Remote Control for Sony RMT-TX200E](#).

## **PRODUCT OVERVIEW**



FUNCTION

Original		Recharge	
	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Exit		Exit
	Tv/Radio		TV/R
	Sync Menu		Menu
	Source		AV
	Netflix		Media
	Digital/Analog		Smart

## Original

## Rechange

	Action Menu	 + 	Shift + Menu
	Home		Sleep
	Guide		Guide
	Back		Back
	TV		Options
	Recall		Pre Ch
	Help		3D
	[≡]		Text
	[i+]/[?]		Info
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue
	OK		Ok
	Up		Up
	Down		Down
	Right		Right



Original	Rechange
 Left	 Left
 Vol+	 Vol +
 Vol-	 Vol -
 Prog+	 Ch +
 Prog-	 Ch -
 Audio	 Dual
 [...]	 Subt
 Title List	 Format
 Play	 Play
 Pause	 Pause
 Stop	 Stop
 >>	 >>
 <<	 <<
 I<<	 I<<
 >>I	 >>I
 Rec	 Rec
 Mute	 Mute

