



Mandis RRMCGA249WJSA Sharp Remote Control Instructions

[Home](#) » [Mandis](#) » Mandis RRMCGA249WJSA Sharp Remote Control Instructions 



RRMCGA249WJSA Sharp Remote Control
Instructions

Contents

[1 RRMCGA249WJSA Sharp Remote Control](#)

[2 Documents / Resources](#)

[2.1 References](#)

[3 Related Posts](#)

RRMCGA249WJSA Sharp Remote Control

Original		Replacement	
	Show View		Info / Angle
	TV / DVD		TV/Radio /
	Timer On / Off		Sleep / Timer
	Time Shift		Text / Goto
	Dubbing		Vol-
	P in P		Picture / Format
	Input		AV / Input / RDS
	HDD		Shift + 7
	Start Menu		Menu / Home
	DVD		Shift + 2
	Rec List / DVD Top Menu		Smart / List
	Up		Up
	Original / Playlist / DVD Menu		D.Menu / Top
	Left		Left
	Set / Enter		OK
	Right		Right
	Exit		Exit / Cancel / Clear





Original		Replacement	
	Down		Down
	Return		Back / Return
	Yellow		Blue / Prime Video / Random
	Blue		Red / Netflix / Search
	Red		Green / APP / Repeat
	Green		Yellow / YouTube / Repeat
	<< REV		<< / Tune-
	Play		Play / Slow
	>> FWD		>> / Tune+
	Still / Pause		Pause / Step / Freeze
	Stop / Live		Stop / Hold
	Slow		Shift + Play /
	I<< / <II F.Adv		I<< / Preset-
	>>I / F.Adv II>		>>I / Preset+
	Replay		Sound / Title
	Skip Search		Shift + Red / Netflix /
	Function		Zoom / Size

Original	Replacement
	Angle
	Audio
	Subtitle
	REC
	REC Stop
	REC Pause
	Rec Mode
	Direct REC TV
	Chapter Mark / RGB OFF
	On Screen Tamper Proof
	Display / Back Light



<https://all-remote-controls.co.uk/en/Sharp/1066782-2418-replacement-remote-control-for-Sharp-RRMCGA249WJSA.html>

Documents / Resources



[Mandis RRMCGA249WJSA Sharp Remote Control](#) [pdf] Instructions

RRMCGA249WJSA Sharp Remote Control, RRMCGA249WJSA, Sharp Remote Control, Remote Control, Control

References

- [!\[\]\(694fcb4611893e9db5249daba48abfc1_img.jpg\) Replacement remote control for SHARP RRMCGA249WJSA](#)
- [User Manual](#)