



Mandis RRMCGA263AWSA Sharp Remote Control Instructions

[Home](#) » [Mandis](#) » Mandis RRMCGA263AWSA Sharp Remote Control Instructions 



Contents

- [1 RRMCGA263AWSA Sharp Remote Control](#)
- [2 Documents / Resources](#)
 - [2.1 References](#)
- [3 Related Posts](#)

RRMCGA263AWSA Sharp Remote Control



Original	Replacement	Original	Replacement
	On/Standby		Power
	Open/Close		Eject
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	10+		Guide
	Back/Repeat		Back
	Memory		Smart
	Clear		Exit
	Clock/Timer		AV
	Sleep		Sleep
	Bass/Treble		Options
	X-Bass		Dual
	Random		Subt
	<</>>I/Tuning		<<
	>>/>>I/Tuning		>>
	Folder		Text
	Demo/Dimmer		Info
	Preset Up		Up
	Preset Down		Down
	Enter		Ok
	Vol+		Vol +
	Vol+		Right
	Vol-		Vol -
	Vol-		Left
	Mute		Mute
	CD		Yellow





	Mandis RRMCGA263AWSA Sharp Remote Control [pdf] Instructions RRMCGA263AWSA Sharp Remote Control, RRMCGA263AWSA, Sharp Remote Control, Remote Control, Control
	Mandis RRMCGA263AWSA Sharp Remote Control [pdf] Instructions RRMCGA263AWSA Sharp Remote Control, RRMCGA263AWSA, Sharp Remote Control, Remote Control, Control
	Mandis RRMCGA263AWSA Sharp Remote Control [pdf] Instructions RRMCGA263AWSA Sharp Remote Control, RRMCGA263AWSA, Sharp Remote Control, Remote Control, Control

- [Replacement remote control for SHARP Audio System \(RRMCGA263AWSA\)](#)
- [User Manual](#)

