



Mandis SB Media Player Remote Control Instruction Manual

[Home](#) » [Mandis](#) » Mandis SB Media Player Remote Control Instruction Manual 

Contents

- [1 Mandis SB Media Player Remote Control](#)
- [2 Product Information](#)
- [3 OVERVIEW](#)
- [4 Documents / Resources](#)
 - [4.1 References](#)



Mandis SB Media Player Remote Control



Product Information

Specifications

- Model: Oki SB MEDIA PLAYER 1G
- Memory: 1GB
- Power EQ: Yes
- Mute: Yes
- Album Up/Down: Yes
- Playlist Up/Down: Yes
- Rechargeable: Yes
- Dual Power: Yes
- Volume Control: Yes
- Channel Control: Yes
- Pre Ch Guide: Yes

- Smart Media Options: Yes
- Info Menu Exit: Yes
- 3D Red/Green: Yes

Product Usage Instructions

Power and Volume Control:

- To turn on the Oki SB MEDIA PLAYER 1G, press the Power button located on the remote control. Adjust the volume by pressing the Volume + or Volume – buttons on the remote control.

Mute:

- To mute the sound, press the Mute button on the remote control.
- Press it again to unmute.

Album and Playlist Navigation:

- Use the Album Up/Down buttons to navigate through different albums. Use the Playlist Up/Down buttons to navigate through different playlists.

Recharging:

- The Oki SB MEDIA PLAYER 1G is rechargeable. Connect the provided charging cable to the device and a power source to recharge it.

Channel and Media Options:

- Use the Channel + or Channel – buttons to switch between different channels. Use the Pre Ch Guide button to access channel guides.
- Use the Smart Media Options button to access additional media options.

Info, Menu, and Exit:

- The Info button provides information about the current media. The Menu button allows you to access the device's menu.
- The Exit button allows you to exit menus or return to the previous screen.

3D Red/Green:

- The Oki SB MEDIA PLAYER 1G supports 3D content. Use the 3D Red/Green button to toggle the 3D mode on or off.

Other Controls:

- Use the Yellow, Blue, and Red buttons for specific functions related to the media being played. Use the Rec button to start recording.
- Use the Play/Pause button to play or pause media. Use the Stop button to stop media playback.

Frequently Asked Questions (FAQ):

- **Q: How do I replace the remote control for Oki SB MEDIA PLAYER 1G?**
- **A:** You can find a replacement remote control for Oki SB MEDIA PLAYER 1G at this.
- **website:** <https://tout-telecommandes.fr/fr/Oki/1058698-24702-telecommande-de-remplacement-pour-Oki-SB-MEDIA-PLAYER-1G-SOUNDBAR-1GB.html>

OVERVIEW



Original	Recharge
	Power
	Dual
	Mute
	Vol +
	Vol -
	Ch +
	Ch -
	1
	2
	3
	4
	5
	6
	7
	8
	9
	0

Original	Recharge
	Pre Ch
	Guide
	Smart
	Media
	Options
	Info
	Menu
	Exit
	Up
	Right
	Down
	Left
	Ok
	Format
	3D
	Red
	Green





Original	Rechange	Original	Rechange
 Yellow	 Yellow		
 Blue	 Blue		
 Red / Rec	 Rec		
 <<	 <<		
 >>	 >>		
 Play / Pause	 Play		
 Play / Pause	 Pause		
 Stop	 Stop		
 >	 >>		
 <	 <<		
 >	 SHIFT +  Shift + Pause		
 Ir A	 RETURN BACK Back		
 Widgets TV	 REPEAT TEXT Text		
 Top TV	 TIMER AV AV		



website: <https://tout-telecommandes.fr/fr/Oki/1058698-24702-telecommande-de-remplacement-pour-Oki-SB-MEDIA-PLAYER-1G-SOUNDBAR-1GB.html>

Documents / Resources



[Mandis SB Media Player Remote Control](#) [pdf] Instruction Manual
 SB, SB Media Player Remote Control, Media Player Remote Control, Remote Control, Control

References

-  [Télécommande qui remplace OKI SB MEDIA PLAYER 1G \(SOUNDBAR 1GB\)](#)
- [User Manual](#)