




Mandis SE-R0334 Remote Control Instructions

[Home](#) » [Mandis](#) » Mandis SE-R0334 Remote Control Instructions 

Contents

- 1 [Mandis SE-R0334 Remote Control](#)
- 2 [Specifications:](#)
- 3 [Product Usage Instructions:](#)
- 4 [Remote Control Buttons:](#)
- 5 [Frequently Asked Questions](#)
- 6 [Documents / Resources](#)
 - 6.1 [References](#)
- 7 [Related Posts](#)



Mandis SE-R0334 Remote Control



Specifications:

- Model: SE-R0299
- Compatible with: Toshiba devices

Product Usage Instructions:



Original	Recharge
Open/Close	Eject / Surround
Input Select	AV / Input / RDS
Standby	Power
1	1
2	2
3	3
Prog+	CH+ / Page+
4	4
5	5
6	6
Prog-	CH- / Page-
7	7
8	8
9	9
Timer Prog	Sleep / Timer
Setup	Setup / OPT /
0	0

Original	Recharge
Clear	Exit / Cancel / Clear
[i+] / Info	Info / Angle
Text	Text / Goto
Variable Replay	Vol+
Variable Skip	Vol-
Guide	Guide / EPG / -/-
Top Menu	D.Menu / Top
Up	Up
Disc Menu	Menu / Home
Left	Left
Enter / OK	OK
Right	Right
Display	Display / Media
Down	Down
Return	Back / Return
Red	Red / Netflix / Search
Green	Green / APP / Repeat



Original	Recharge
Yellow	Yellow / YouTube / Repeat
Blue	Blue / Prime Video / Random
<<	<< / Tune-
Play	Play / Slow
>>	>> / Tune+
I<<	I<< / Preset-
Stop	Stop / Hold
>>I	>>I / Preset+
Pause	Pause / Step / Freeze
HDD	Shift + 7
DVD	Shift + 2
Time Slip	TV/Radio /
Dubbing	Picture / Format
Rec Mode	Shift + Rec / Rec Mode
Rec	Rec / Rec Mode
Subtitle	Subtitle / EQ
O))) / Audio	Audio / Lang / I /

Original	Recharge
Sat Link	Smart / List



Remote Control Buttons:

The remote control has various buttons that perform different functions. Here is a detailed explanation of each button:

Open/Close

Press this button to open or close the input select.

Standby

Press this button followed by the numbers 1, 2, or 3 to put the device on standby mode.

Prog+

Press this button followed by the numbers 4, 5, or 6 to program the device.

Prog7

Press this button followed by the numbers 7, 8, or 9 for programming purposes.

Timer Prog Setup

Press this button followed by the number 0 to set up timer programming.

Recharge

This button is used for recharging purposes.

Eject / Surround AV / Input / RDS

This button serves multiple functions including ejecting discs, adjusting surround audio settings, selecting inputs, and accessing RDS features.

Power

Press this button followed by the numbers 1, 2, or 3 to power on the device.

CH+ / Page+

Press this button followed by the numbers 4, 5, or 6 to change channels or pages.

CH- / Page7

Press this button followed by the numbers 7, 8, or 9 to change channels or pages.

Sleep / Timer Setup / OPT / To0ols

This button has multiple functions including setting a sleep timer, accessing timer setup options, selecting OPT features, and accessing tools.

Clear [i+]/Info

Press this button to clear information or access additional information.

Text Variable Replay

This button is used for text variable replay purposes.

Variable Skip Guide

Press this button to skip variables or access the guide.

Top Menu Up

Press this button to access the top menu or move up.

Disc Menu Left

Press this button to access the disc menu or move left.

Enter / OK Right

Press this button to enter or confirm selections, or move right.

Display Down Return Red Green

These buttons have multiple functions including displaying information, moving down, returning to previous screens, and accessing red or green features.

Exit / Cancel / Clear

Press this button to exit, cancel, or clear selections.

Info / Angle Text / Goto

These buttons have multiple functions including accessing information, adjusting angles, and going to specific locations.

Vol+ VolGuide / EPG / +/-D.Menu / Top MUEpnu Menu / Home Left OK Right Display / Media Down Back / Return

This button has multiple functions including adjusting volume, accessing volume guide or EPG, accessing the main menu or home screen, moving left, confirming selections, moving right, displaying information, accessing media options, moving down, and returning back.

Red / Netflix / Search

These buttons have multiple functions including accessing red features, launching Netflix, and performing searches.

Green / APP / Repeat

These buttons have multiple functions including accessing green features, launching apps, and repeating actions.

Yellow Blue > I>I Pause HDD DVD Time Slip Dubbing Rec Mode Rec Subtitle O))/Audio

These buttons have multiple functions including accessing yellow or blue features, adjusting playback speed, pausing playback, performing HDD or DVD actions, enabling time slip, dubbing content, selecting recording modes, adjusting subtitles, and controlling audio settings.

/ Tune+

Press this button to move forward or tune to the next channel or station.

I>I / Preset+

Press this button to pause or preset channels.

Pause / Step / Freeze

These buttons have multiple functions including pausing playback, stepping through content, and freezing frames.

+ Shift + 7

Press these buttons together to perform a specific action.

+ Shift + 2

Press these buttons together to perform a specific action.

TV/Radio / Picture Format

This button has multiple functions including switching between TV and radio modes and adjusting picture formats.

Shift + Rec

Press these buttons together to perform a specific action.

+ / Rec Mode

Press these buttons together to access recording modes.

Rec / Rec Mode

Press this button to start recording or access recording modes.

Subtitle / EQ

Press this button to adjust subtitles or access EQ settings.

Audio / Lang I/II

Press this button to adjust audio settings or switch between languages.

Sat Link

This button is used for satellite link purposes.

Smart / List

Press this button to access smart features or lists.

Frequently Asked Questions

Q: What is the model number of the remote control?

A: The model number of the remote control is SE-R0299.

Q: Which devices is the remote control compatible with?

A: The remote control is compatible with Toshiba devices.

Documents / Resources



[Mandis SE-R0334 Remote Control](#) [pdf] Instructions
SE-R0334 Remote Control, SE-R0334, Remote Control, Control

References

- [User Manual](#)