



Mandis SERVIMAT TNT65HDU Remote Control Replacement Instructions

[Home](#) » [Mandis](#) » Mandis SERVIMAT TNT65HDU Remote Control Replacement Instructions 

Contents

- [1 Mandis SERVIMAT TNT65HDU Remote Control Replacement](#)
- [2 Product Information](#)
- [3 Product Usage Instructions](#)
- [4 Frequently Asked Questions \(FAQ\)](#)
- [5 Product Information](#)
- [6 Remote Using Instruction](#)
- [7 Documents / Resources](#)
 - [7.1 References](#)



Mandis SERVIMAT TNT65HDU Remote Control Replacement



Product Information

The SERVIMAT TNT65HDU is a remote control designed for use with SERVIMAT DF00 TNT65HDU devices. It allows users to control various functions of the device, including power, volume, channel selection, menu navigation, and more. This remote control is an original replacement for the SERVIMAT DF00 TNT65HDU remote control. It provides the same functionality and features as the original remote control. For more information or to purchase a replacement remote control, please visit <https://tout-telecommandes.fr/fr/SERVIMAT/1059469-92380-telecommande-de-remplacement-pour-SERVIMAT-DF00-TNT65HDU.html>

Specifications

- Model: SERVIMAT TNT65HDU
- Compatibility: SERVIMAT DF00 TNT65HDU devices
- Color: Black
- Power Source: 2x AAA batteries (not included)

Product Usage Instructions

1. Power On/Off

To turn on the device, press the “Power” button. To turn off the device, press the “Power” button again.

2. Volume Control

To increase the volume, press the “Vol +” button. To decrease the volume, press the “Vol -” button.

3. Channel Selection

To change channels, use the number buttons (1-9) to directly enter the channel number. Alternatively, use the “CH +” and “CH -” buttons to navigate through channels.

4. Menu Navigation

To access the device menu, press the “Menu” button. Use the arrow buttons (Up, Down, Left, Right) to navigate through the menu options. Press the “OK” button to select an option.

5. Recording

To start recording, press the “Rec” button. To stop recording, press the “Stop” button.

6. Teletext and Subtitles

To access teletext, press the “TTX” button. To enable or disable subtitles, press the “S-Titres” button.

Frequently Asked Questions (FAQ)

Q: Is this remote control compatible with all SERVIMAT DF00 TNT65HDU devices?

A: Yes, this remote control is designed specifically for SERVIMAT DF00 TNT65HDU devices and is fully compatible with them.

Product Information



Remote Using Instruction

Original/ Recharge

	Marche / Veille		Power		TV / Radio		TV/R
	Arret Son		Mute		Menu		Menu
	1		1		Quitter		Exit
	2		2		Up		Up
	3		3		Left		Left
	4		4		OK		Ok
	5		5		Right		Right
	6		6		Down		Down
	7		7		Rec		Rec
	8		8		Stop		Stop
	9		9		Vol +		Vol +
	0		0		Vol -		Vol -
	Info		Info		TTX		Text
	Retour		Back		FAV		Pre Ch
	EPG		Guide		CH +		Ch +
	Audio		Dual		CH -		Ch -
	S-Titres		Subt		D.D		Smart

	I<< Prev		I<<
	Play / Lecture		Play
	<< REW		<<
	Enreg.		Shift + Rec
	>>I Next		>>I
	Pause		Pause
	>> FWD		>>
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue / Timer		Blue
	Blue / Timer		AV

- <https://tout-telecommandes.fr/fr/SERVIMAT/1059469-92380-telecommande-de-remplacement-pour-SERVIMAT-DF00-TNT65HDU.html>

Documents / Resources



[Mandis SERVIMAT TNT65HDU Remote Control Replacement](#) [pdf] Instructions
SERVIMAT TNT65HDU Remote Control Replacement, SERVIMAT TNT65HDU, Remote
Control Replacement, Control Replacement

References

- [M Télécommande qui remplace SERVIMAT DF00 \(TNT65HDU\)](#)
- [User Manual](#)