



Mandis Sharp GA771WJSA Remote Control Instructions

[Home](#) » [Mandis](#) » Mandis Sharp GA771WJSA Remote Control Instructions 

Mandis Sharp GA771WJSA Remote Control



Contents

- 1 [Product Overview](#)
- 2 [Buttons Descriptions](#)
- 3 [Customers Support](#)
- 4 [Documents / Resources](#)
- 4.1 [References](#)

Product Overview



 




 
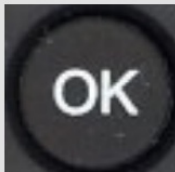 


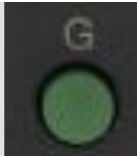 
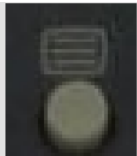 
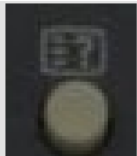 
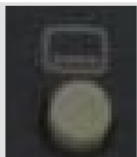 
Buttons Descriptions

Originale		Sostituto	
	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5

 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Recall	 PRE-CHPre Ch
 Source	 AVAV
 ATVATV	 SHIFT+  HOME SMARTShift + Smart
 DTVDTV	 HOME SMARTSmart
 EPGEPG	 - / -- GUIDEGuide
 RADIORadio	 SEARCH TV/RTV/R

	▼/O)/I/II/I+II		Dual
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute
	P+		Ch +
	P-		Ch -
	P.Info		Info
	[i+]		List
	AV Mode		Format

	[<>]		Eject
	Eco		3D
	Menu		Menu
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok
	End		Exit
	Back		Back
	Red		Red

	Green		Green
	Yellow		Yellow
	Blue		Blue
	[≡]		Text
	[≡?]	 + 	Shift + Subt
	[...]		Subt
	[≡+]	 + 	Shift + Options
	[≡o]	 + 	Shift + Dual
	[≡◆]	 + 	Shift + TV/R

 Sleep	 Sleep
 Power Aquos Link	 +  Shift + Power
 <<	 <<
 Play	 Play
 >>	 >>
 Option	 Options
 Rec	 Rec
 Rec Stop	 +  Shift + Stop
 Stop	 Stop

[Sharp GA771WJSA](#)

<https://tutti-i-telecomandi.it/it/Sharp/1055079-30416-telecomando-di-sostituzione-per-Sharp-GA771WJSA.html>



Documents / Resources



[Mandis Sharp GA771WJSA Remote Control](#) [pdf] Instructions
Sharp GA771WJSA, Sharp GA771WJSA Remote Control, Remote Control, Control

References

- [M Telecomando sostituto di SHARP GA771WJSA](#)
- [User Manual](#)