

Mandis Sharp RRMCGA263AWSA Remote Control



Mandis Sharp RRMCGA263AWSA Remote Control Instructions

[Home](#) » [Mandis](#) » Mandis Sharp RRMCGA263AWSA Remote Control Instructions 

Contents

- [1 Mandis Sharp RRMCGA263AWSA Remote Control](#)
- [2 Product Information](#)
- [3 Product Usage Instructions](#)
- [4 Replacement Remote Control](#)
- [5 FAQ](#)
- [6 Documents / Resources](#)
 - [6.1 References](#)
- [7 Related Posts](#)



Mandis Sharp RRMCGA263AWSA Remote Control



Product Information

Specifications

- Model: Sharp RRMCGA263AWSA
- Compatible with: Sharp Audio System
- Replacement Remote Control: Yes
- Color: Original – Black, Replacement – White
- Dimensions: Not specified
- Weight: Not specified

Product Usage Instructions



Original	Replacement	Original	Replacement
On/Standby	Power	Sleep	Sleep
Open/Close	Eject	Bass/Treble	Options
1	1	X-Bass	Dual
2	2	Random	Subt
3	3	<</I<</Tuning	<<
4	4	>>/>>/I/Tuning	>>
5	5	Folder	Text
6	6	Demo/Dimmer	Info
7	7	Preset Up	Up
8	8	Preset Down	Down
9	9	Enter	Ok
0	0	Vol+	Vol +
10+	Guide	Vol+	Right
Back/Repeat	Back	Vol-	Vol -
Memory	Smart	Vol-	Left
Clear	Exit	Mute	Mute
Clock/Timer	AV	CD	Yellow



Original Remote Control

The original remote control for the Sharp RRMCGA263AWSA has the following buttons:

- On/Standby: Press to turn the audio system on or off.
- Open/Close: Use this button to open or close the CD tray.
- 1-10+: Numeric buttons for selecting tracks or entering numbers.
- Back/Repeat: Press to go back to the previous track or repeat the current track.
- Memory: Use this button to store radio station presets or other settings.
- Clear: Press to clear any entered values or settings.
- Clock/Timer: Use this button to set the clock or timer functions.
- Sleep: Press to activate the sleep timer function.
- Bass/Treble: Adjust the bass and treble levels using these buttons.
- X-Bass: Activate or deactivate the X-Bass feature.
- Random: Enable or disable random playback mode.
- Folder: Not specified in the manual.
- Demo/Dimmer: Activate the demo mode or adjust the display brightness.
- Preset Up/Down: Use these buttons to navigate through preset radio stations.
- Enter: Press to confirm selected options or settings.
- Vol+: Increase the volume level.
- Vol-: Decrease the volume level.
- Mute: Mute the audio output.
- CD: Switch to CD mode.

Replacement Remote Control

Original		Replacement	
	USB		Green
	Tuner		Blue
	Input/Audio/Line		Red
	iPod		3D
	(TV Out)/Display		TV/R
	Menu		Menu
	Play/Pause iPod		Play
	Display CD/USB		Ch +
	Stop CD/USB		Stop
	Play/Pause		Pause
	ASPM RDS		D. Menu
	PTY RDS		Format
	Display RDS		Ch -

The replacement remote control for the Sharp RRMCGA263AWSA has the following buttons:

- Power: Press to turn the audio system on or off.
- Eject: Use this button to open the CD tray.
- Guide: Not specified in the manual.
- Back: Go back to the previous screen or menu.
- Smart: Not specified in the manual.
- Exit: Exit the current function or menu.
- AV: Switch to AV mode.
- Sleep: Activate the sleep timer function.
- Options: Access additional options or settings.
- Dual: Not specified in the manual.
- Subt: Select subtitles when available.
- Text: Access teletext or text information.
- Info: Display additional information about the current content.
- Up/Down/Ok/Right/Left: Navigation buttons for menu selection and navigation.
- Vol+: Increase the volume level.
- Vol-: Decrease the volume level.
- Mute: Mute the audio output.
- Yellow/Blue/Red/Green: Color buttons with specific functions depending on the context.
- 3D: Activate or deactivate 3D mode.
- TV/R: Switch between TV and radio modes.
- Menu: Access the main menu.
- Play/Pause: Play or pause the current content.
- Ch +/Ch -: Change channels or navigate through tracks.

- Stop: Stop playback or cancel current action.
- Pause: Pause the playback temporarily.
- D. Menu: Access the detailed menu.
- Format: Format the current media or storage device.

FAQ

Q: How do I set the clock and timer using the original remote control?

A: To set the clock and timer, follow these steps:

1. Press the Clock/Timer button on the original remote control.
2. Use the numeric buttons (1-10+) to enter the desired time.
3. Press Enter to confirm the entered time.

Is the replacement remote control compatible with all models of the Sharp Audio System?

The replacement remote control is specifically designed for the Sharp RRMCGA263AWSA model. It may not be compatible with other models of the Sharp Audio System.

What is the purpose of the X-Bass feature?

The X-Bass feature enhances the bass output of the audio system, providing a richer and more powerful sound experience.



How do I navigate through preset radio stations using the replacement remote control?

To navigate through preset radio stations, use the Preset Up/Down buttons on the replacement remote control.

<https://all-remote-controls.co.uk/en/Sharp/1063071-85997-replacement-remote-control-for-Sharp-Audio-System-RRMCGA263AWSA.html>

Sharp RRMCGA263AWSA

Documents / Resources

	<p>Mandis Sharp RRMCGA263AWSA Remote Control [pdf] Instructions Sharp RRMCGA263AWSA, Sharp RRMCGA263AWSA Remote Control, Remote Control, Control</p>
	<p>Mandis Sharp RRMCGA263AWSA Remote Control [pdf] Instructions Sharp RRMCGA263AWSA, Sharp RRMCGA263AWSA Remote Control, Remote Control, Control</p>

References

- [M Replacement remote control for SHARP Audio System \(RRMCGA263AWSA\)](#)
- [User Manual](#)