



Mandis Sharp RRMCGA263AWSA Replacement Remote Control Instructions

[Home](#) » [Mandis](#) » Mandis Sharp RRMCGA263AWSA Replacement Remote Control Instructions 

Contents

- [1 Mandis Sharp RRMCGA263AWSA Replacement Remote](#)
- [2 Product Information](#)
- [3 Product Usage Instructions](#)
- [4 FAQ](#)
- [5 Product Overview](#)
- [6 Remote Using Instruction](#)
- [7 Documents / Resources](#)
 - [7.1 References](#)

Mandis

Mandis Sharp RRMCGA263AWSA Replacement Remote



Product Information

Specifications

- Model: Sharp RRMCGA263AWSA
- Compatibility: Sharp Audio System
- Color: White
- Dimensions: Not specified
- Weight: Not specified

Product Usage Instructions

Power On/Off

To turn the device on or off, press the “On/Standby” button located at the top of the remote control.

Open/Close

To open or close the device, press the “Open/Close” button located on the remote control.

Number Buttons

The number buttons (1-0) on the remote control are used for various functions such as selecting channels, entering numeric values, or navigating menus.

Back/Repeat

The “Back/Repeat” button allows you to go back to the previous screen or repeat a track or action.

Memory Clear

To clear the memory, press the “Memory Clear” button on the remote control.

Clock/Timer

The “Clock/Timer” button is used to set and adjust the clock or timer settings on the device.

Power Eject

The “Power Eject” button is used to eject a CD or other media from the device.

Sleep

The “Sleep” button is used to activate or deactivate the sleep mode on the device.

Bass/Treble

The “Bass/Treble” buttons are used to adjust the bass and treble levels of the audio output.

Random

The “Random” button is used to play tracks in a random order.

Folder Demo/Dimmer

The “Folder Demo/Dimmer” button is used to start or stop a folder demo or adjust the brightness of the display.

Preset Up/Down

The “Preset Up/Down” buttons are used to navigate through preset radio stations or saved settings.

Enter

The “Enter” button is used to confirm a selection or input.

Volume Control

The volume control buttons (“Vol+”, “Vol-”) are used to increase or decrease the volume level.

Mute

The “Mute” button is used to mute or unmute the audio output.

CD/USB

The “CD/USB” button is used to switch between CD and USB modes.

FAQ

Q: Where can I find a replacement remote control for Sharp RRMCGA263AWSA?














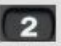

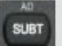
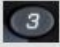
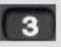


















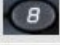
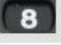





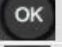
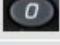
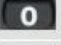


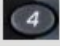
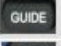
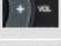


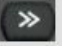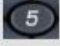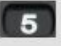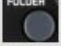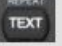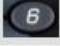

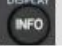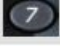

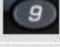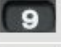



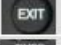

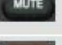




A: You can find a replacement remote control for Sharp RRMCGA263AWSA at the following website:
[Replacement Remote Control for Sharp RRMCGA263AWSA.](#)

Product Overview

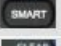

Remote Using Instruction

Original / Replacement

	On/Standby		Power		Sleep		Sleep
	Open/Close		Eject		Bass/Treble		Options
	1		1		X-Bass		Dual
	2		2		Random		Subt
	3		3		<</I<</Tuning		<<
	4		4		>>/>>/I/Tuning		>>
	5		5		Folder		Text
	6		6		Demo/Dimmer		Info
	7		7		Preset Up		Up
	8		8		Preset Down		Down
	9		9		Enter		Ok
	0		0		Vol+		Vol +
	10+		Guide		Vol+		Right
	Back/Repeat		Back		Vol-		Vol -
	Memory		Smart		Vol-		Left
	Clear		Exit		Mute		Mute
	Clock/Timer		AV		CD		Yellow

	USB		Green
	Tuner		Blue
	Input/Audio/Line		Red
	iPod		3D
	(Tv Out)/Display		TV/R
	Menu		Menu
	Play/Pause iPod		Play
	Display CD/USB		Ch +
	Stop CD/USB		Stop
	Play/Pause		Pause
	ASPM RDS		D. Menu
	PTY RDS		Format
	Display RDS		Ch -

- <https://all-remote-controls.co.uk/en/Sharp/1063071-85997-replacement-remote-control-for-Sharp-Audio-System-RRMCGA263AWSA.html>

Documents / Resources



[Mandis Sharp RRMCGA263AWSA Replacement Remote Control](#) [pdf] Instructions
Sharp RRMCGA263AWSA Replacement Remote Control, Sharp RRMCGA263AWSA, Replace
ment Remote Control, Remote Control

References

- [M Replacement remote control for SHARP Audio System \(RRMCGA263AWSA\)](#)
- [User Manual](#)