



Mandis SO SPEAKY PVR Remote Control Instructions

[Home](#) » [Mandis](#) » Mandis SO SPEAKY PVR Remote Control Instructions 

Contents

- [1 Mandis SO SPEAKY PVR Remote Control](#)
- [2 Product Information](#)
- [3 Product Usage Instructions](#)
- [4 FAQ](#)
- [5 BUTTON FUNCTION](#)
- [6 Documents / Resources](#)
 - [6.1 References](#)
- [7 Related Posts](#)



Mandis SO SPEAKY PVR Remote Control



Product Information

Specifications

- **Model:** DANE-ELEC SO-SPEAKY-PVR
- **Original Remote Control:** Yes
- **Replacement Remote Control:** Yes
- **Power:** 1
- **Tv System:** TV/Radio

Product Usage Instructions

Power

To turn on the device, press the power button (1).

Tv System

To switch between TV and Radio mode, press the Tv System button (2).

Mute

To mute the audio, press the Mute button (3).

Rec

To start recording or access the recording mode, press the Rec button (4).

Browser

To access the Smart or List browser, press the Browser button (5).

Timer

To set a sleep timer or a timer for a specific action, press the Timer button (6).

Copy

To access the D.Menu or Top menu options, press the Copy button (7).

Guide

To access the TV Guide or Electronic Program Guide, press the Guide button (8).

Volume Control

To adjust the volume, use the Vol+ (9) and Vol- (0) buttons.

Navigation Buttons

Use the Up, Left, Enter, and Right buttons for navigation and selecting options.

Play, Pause, Stop

Use the Play, Pause/Step, and Stop buttons for media playback control.

Subtitle, Audio, Zoom

Use the Subtitle, Audio/Lang I/II, and Zoom/Size buttons to control subtitle settings, audio language options, and zoom level.

Sleep Timer

To set a sleep timer, press the Sleep/Timer button (6) followed by the desired duration.

FAQ**Where can I find a replacement remote control for DANE-ELEC SO-SPEAKY-PVR?**

You can find a replacement remote control for DANE-ELEC SO-SPEAKY-PVR [here](#).

BUTTON FUNCTION

Original		Replacement		Original		Replacement	
	Power		Power		1		1
	Tv System		TV/Radio /		2		2
	Mute		Mute / Dimmer		3		3
	Rec		Rec / Rec Mode		4		4
	Browser		Smart / List		5		5
	Timer		Sleep / Timer		6		6
	Copy		D.Menu / Top		7		7
	Guide		Guide / EPG / -/--		8		8
	Vol-		Vol-		9		9
	Up		Up		0		0
	Vol+		Vol+		Goto		Text / Goto
	Left		Left		Slow		Shift + Play /
	Enter		Shift + OK		Option		Shift + Setup / OPT / Tools
	Right		Right		Play		Play / Slow
	Return		Back / Return		Stop		Stop / Hold
	Down		Down		Pause/Step		Pause / Step / Freeze
	Setup		Setup / OPT /		I<</Prev		I<< / Preset-

Original		Replacement	
	>>/Next		>>I / Preset+
	<</FR		<< / Tune-
	>>/FF		>> / Tune+
	Subtitle		Subtitle / EQ
	Display		Display / Media
	Audio		Audio / Lang I/II
	Zoom		Zoom / Size
	Time Shift		Shift + Sleep / Timer
	Repeat		Green / APP / Repeat
	Select		OK
	Confirm		Shift + Smart / List

FOR MORE INFO: <https://all-remote-controls.co.uk/en/DANE-ELEC/1059382-23897-replacement-remote-control-for-DANE-ELEC-SO-SPEAKY-PVR-1TB-SoSpeakyPVR1TB.html>

Documents / Resources



[Mandis SO SPEAKY PVR Remote Control](#) [pdf] Instructions

SO SPEAKY PVR Remote Control, SO SPEAKY PVR, Remote Control, Control

References

- [M Replacement remote control for DANE-ELEC SO SPEAKY PVR 1TB \(SoSpeakyPVR1TB\)](#)
- [User Manual](#)