

Mandis ST-06K Replacement Remote Control



Mandis ST-06K Replacement Remote Control Instructions

[Home](#) » [Mandis](#) » Mandis ST-06K Replacement Remote Control Instructions 

Contents

- [1 Mandis ST-06K Replacement Remote Control](#)
- [2 Product Information](#)
 - [2.1 Specifications](#)
- [3 Product Usage Instructions](#)
- [4 Remote Control Replacement Function](#)
- [5 FAQ](#)
- [6 Documents / Resources](#)
 - [6.1 References](#)

Mandis

Mandis ST-06K Replacement Remote Control



Product Information

Specifications

- **Model:** ST-06K
- **Product Type:** Remote Control
- **Compatibility:** Replacement remote for Original ST-06K remote
- **Colour:** Black
- **Dimensions:** Not specified
- **Weight:** Not specified

Product Usage Instructions

- **Power On/Off**
To power on the device, press the “Power” button located at the top of the remote. To power off the device, press and hold the “Power” button for a few seconds until the device shuts down.
- **Mute**
To mute the sound, press the “Mute” button located below the “Power” button.
- **Numeric Keypad**
The numeric keypad allows you to directly enter channel numbers or perform numerical inputs. Press the corresponding number buttons to enter the desired numbers.
- **AV Input Selection**
To switch between different AV inputs, use the “AV” button located on the remote. Pressing this button will cycle

through the available AV input options.

- Volume Control

To adjust the volume level, use the “+” and “-” buttons located on the right side of the remote. Press the “+” button to increase the volume and the “-” button to decrease the volume.

- Channel Selection

To change channels, use the “+” and “-” buttons located on the left side of the remote. Press the “+” button to go to the next channel and the “-” button to go to the previous channel.

- Menu Navigation

To navigate through the menu options, use the arrow buttons located in the centre of the remote. The “Up” and “Down” buttons allow you to scroll through the menu options, while the “Right” and “Left” buttons help you navigate within a specific menu. Press the “OK” button to confirm a selection.

- Additional Functions

The remote control offers various additional functions such as Zoom, Text, Subtitles, Media controls, and Smart features. Please refer to the user manual for detailed instructions on how to use these functions.

Remote Control Replacement Function

ST-06K



Original	Rechange
	Power
	Mute
	1
	2
	3
	4
	5
	6
	7
	8
	9
	0
	Guide
	AV
	Green
	Shift + AV
	Blue

Original	Rechange
	Red
	Info
	Options
	Yellow
	Eject
	Dual
	Up
	Ch +
	Ok
	Down
	Ch -
	Right
	Vol +
	Left
	Vol -
	Menu
	Smart





- **Q: What is the model number of the remote control?**

A: The model number of the remote control is ST-06K.

- **Q: How can I find a replacement remote for my ST-06K?**

A: You can find a replacement remote for ST-06K at the following website: [Replacement Remote for ST-06K](#).

	Mandis ST-06K Replacement Remote Control [pdf] Instructions ST-06K Replacement Remote Control, ST-06K, Replacement Remote Control, Remote Control
	Mandis ST-06K Replacement Remote Control [pdf] Instructions ST-06K Replacement Remote Control, ST-06K, Replacement Remote Control, Remote Control

- **M** Télécommande qui remplace ST-06K

- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)