



## Mandis TECHNEMA TE3219SM Remote Control Replacement Instructions

[Home](#) » [Mandis](#) » Mandis TECHNEMA TE3219SM Remote Control Replacement Instructions 

Mandis TECHNEMA TE3219SM Remote Control Replacement



## Contents


- [1 Remote Control Replacement](#)
- [2 Customer Support](#)
- [3 Documents / Resources](#)
  - [3.1 References](#)
- [4 Related Posts](#)

## Remote Control Replacement




Original


Re-change

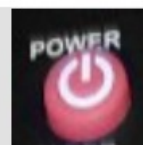

Power

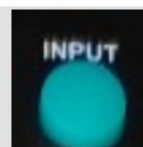

Input

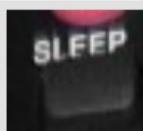


Sleep



Nicam



P.Mode

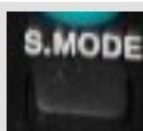

S.Mode



Power



AV / Input / RDS



Sleep / Timer



Audio / Lang I/II



Picture / Format




Sound / Title



1



2

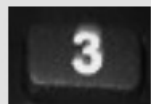

3



4



5



6



1



2



3




4



5



6
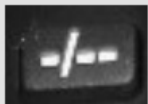
|                                                                                   |      |
|-----------------------------------------------------------------------------------|------|
|  | 7    |
|  | 8    |
|  | 9    |
|  | -/-- |
|  | 0    |

|                                                                                                                                                                          |                                  |
|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------------------------|
|                                                                                        | 7                                |
|                                                                                        | 8                                |
|                                                                                        | 9                                |
|  +  | Shift +<br>Guide /<br>EPG / -/-- |
|                                                                                        | 0                                |

Original


Re-change



Recall




Del

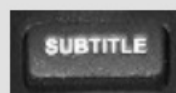

Subtitle



EPG

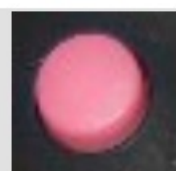

Red



Green



Back / Return



+




Shift + Exit  
/ Cancel /  
Clear




Subtitle / EQ



Guide / EPG / -/--

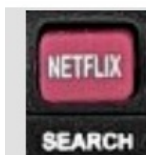

Red / Netflix /  
Search

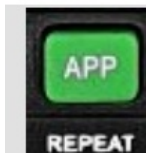

Green / APP / Repeat




Yellow



Blue




Mute

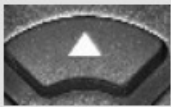


Up



Info

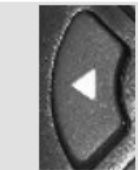

Left

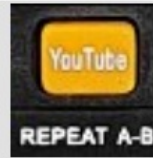

Yellow / YouTube /  
Repeat



Blue / Prime Video /  
Random




Mute / Dimmer



Up



Info / Angle

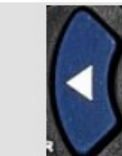

Left




OK / CH List



Right



Menu

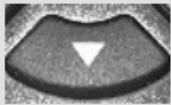

Down



Exit



OK




Right



Menu / Home



Down

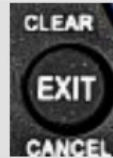


Exit / Cancel / Clear





Original

Re-change
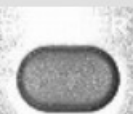
|                                                                                   |         |
|-----------------------------------------------------------------------------------|---------|
|   | Vol+    |
|  | Home    |
|  | CH+     |
|  | Vol-    |
|  | Browser |
|  | CH-     |

|                                                                                    |              |
|------------------------------------------------------------------------------------|--------------|
|    | Vol+         |
|  | D.Menu / Top |
|   | CH+ / Page+  |
|   | Vol-         |
|  | Smart / List |
|   | CH- / Page-  |

|                                                                                     |            |
|-------------------------------------------------------------------------------------|------------|
|  | Rec        |
|  | Fav / Goto |
|  | Fav / Goto |
|  | T.Shift    |
|  | PVR List   |
|  | S.Page     |

|                                                                                      |                   |
|--------------------------------------------------------------------------------------|-------------------|
|   | Rec / Rec Mode    |
|   | Fav / Marker / PC |
|  | Shift +<br>Text / |
|   | Setup / OPT /     |
|   | Display / Media   |
|   | Eject / Surround  |



S.Page



Zoom



Play/Pause / TTX



Play/Pause / TTX



Play/Pause / TTX



<< / TV/Radio



Zoom / Size



Pause / Step /  
Freeze



Text / Goto



Play / Slow



<< / Tune-

| Original                                                                                        | Re-change                                                                                                                                                                                 |
|-------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|  << / TV/Radio |  TV/Radio /                                                                                              |
|  >> / Hold     |  >> / Tune+                                                                                              |
|  >> / Hold     |  +  Shift +<br>Stop / |
|  Stop / Reveal |  Stop / Hold                                                                                             |
|  I<< / Size    |  I<< / Preset-                                                                                          |
|  >>I / Index |  >>I / Preset+                                                                                         |



Customer Support

<https://tout-telecommandes.fr/fr/TECHNEMA/1066948-92286-telecommande-de-remplacement-pour-TECHNEMA-TE3219SM.html>

[TECHNEMA TE3219SM](#)



---

## Documents / Resources

|                                                                                   |                                                                                                                                                                                                                    |
|-----------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|  | <p><a href="#">Mandis TECHNEMA TE3219SM Remote Control Replacement</a> [pdf] Instructions<br/>TECHNEMA TE3219SM Remote Control Replacement, TECHNEMA TE3219SM, Remote Control Replacement, Control Replacement</p> |
|  | <p><a href="#">Mandis TECHNEMA TE3219SM Remote Control Replacement</a> [pdf] Instructions<br/>TECHNEMA TE3219SM Remote Control Replacement, TECHNEMA TE3219SM, Remote Control Replacement, Control Replacement</p> |

## References

- [M Télécommande qui remplace TECHNEMA TE3219SM](#)
- [User Manual](#)