



# Mandis TECHNEMA TE3219SM Replacement Remote Control Instructions

[Home](#) » [Mandis](#) » Mandis TECHNEMA TE3219SM Replacement Remote Control Instructions 

## Contents

- [1 Mandis TECHNEMA TE3219SM Replacement Remote Control](#)
- [2 Product Information](#)
- [3 Product Usage Instructions](#)
- [4 FAQ](#)
- [5 REPLACEMENT PARTS](#)
- [6 Documents / Resources](#)
  - [6.1 References](#)



**Mandis TECHNEMA TE3219SM Replacement Remote Control**



## Product Information

The TECHNEMA TE3219SM is a television model that offers a range of features for an enhanced viewing experience. With its sleek design and advanced functionality, this TV is perfect for both entertainment and convenience.

## Specifications

- **Model:** TECHNEMA TE3219SM
- **Power Input:** AC 100-240V, 50/60Hz
- **Sleep Timer:** Yes
- **Nicam:** Yes
- **P.Mode:** Picture Mode
- **S.Mode:** Sound Mode
- **Remote Control:** Included

## Product Usage Instructions

- **Power and Input Selection**

To turn on the TV, press the “Power” button on the remote control. Use the number keys (1-9) to directly select a channel. Press the “AV” button to access different input sources. Use the arrow keys to navigate through the menu options.

- **Audio and Language Settings**

Adjust the volume by pressing the “Vol+” or “Vol-” buttons on the remote control. To change the audio language, press the “Audio/Lang” button and use the arrow keys to select the desired option.

- **Picture and Format Settings**

Customize the picture settings by pressing the “Picture/Format” button. Use the arrow keys to adjust options such as brightness, contrast, and color. Select the desired picture format using the arrow keys.

- **Sound and Title Settings**

Press the “Sound/Title” button to access sound-related settings. Use the arrow keys to adjust options like bass, treble, and balance. To change the title of the current program, select the “Title” option and use the arrow keys to input the desired title.

- **Sleep Timer and Timer Recording**

Set the sleep timer by pressing the “Sleep/Timer” button and using the arrow keys to select the desired time interval. To schedule a timer recording, navigate to the program you wish to record using the arrow keys and press the corresponding number key (1-9).

## **FAQ**

- **Q: How do I change the channel?**

A: Use the number keys (1-9) on the remote control to directly select a channel. Alternatively, use the arrow keys to navigate through the available channels.

- **Q: How can I adjust the volume?**

A: Press the “Vol+” or “Vol-” buttons on the remote control to increase or decrease the volume.

- **Q: Can I set a timer for the TV to turn off automatically?**

A: Yes, you can set a sleep timer by pressing the “Sleep/Timer” button and selecting the desired time interval using the arrow keys.

- **Q: How do I change the audio language?**

A: Press the “Audio/Lang” button on the remote control and use the arrow keys to select the desired audio language.

- **Q: How do I access different input sources?**

A: Press the “AV” button on the remote control to cycle through different input sources such as HDMI, AV, or USB.

## **REPLACEMENT PARTS**



Original	Replacement	Original	Replacement
	Power		Power
	Input		AV / Input / RDS
	Sleep		Sleep / Timer
	Nicam		Audio / Lang I/II
	P.Mode		Picture / Format
	S.Mode		Sound / Title
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Recall		Recall
	SubTitle		SubTitle
	EPG		EPG
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue
	Mute		Mute
	Up		Up
	Info		Info
	Left		Left
	OK / CH List		OK
	Right		Right
	Menu		Menu
	Down		Down
	Exit		Exit

Original	Replacement	Original	Replacement
	Recall		Back / Return
	Del		Shift + Exit / Cancel / Clear
	SubTitle		SubTitle / EQ
	EPG		Guide / EPG / -/-
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	Mute		Mute / Dimmer
	Up		Up
	Info		Info / Angle
	Left		Left
	OK / CH List		OK
	Right		Right
	Menu		Menu / Home
	Down		Down
	Exit		Exit / Cancel / Clear



Original	Replacement	Original	Replacement
	Vol+		Vol+
	Home		D.Menu / Top
	CH+		CH+ / Page+
	Vol-		Vol-
	Browser		Smart / List
	CH-		CH- / Page-
	Rec		Rec / Rec Mode
	Fav / Goto		Fav / Marker / PC
	Fav / Goto		Shift + Text / Text
	T.Shift		Setup / OPT /
	PVR List		Display / Media
	S.Page		Eject / Surround
	Zoom		Zoom / Size
	Play/Pause / TTX		Pause / Step / Freeze
	Play/Pause / TTX		Text / Goto
	Play/Pause / TTX		Play / Slow
	<< / TV/Radio		<< / Tune-

Original	Replacement	Original	Replacement
	<< / TV/Radio		TV/Radio /
	>> / Hold		>> / Tune+
	>> / Hold		Shift + Stop /
	Stop / Reveal		Stop / Hold
	I<< / Size		I<< / Preset-
	>>I / Index		>>I / Preset+



<https://all-remote-controls.co.uk/en/TECHNEMA/1066948-92286-replacement-remote-control-for-TECHNEMA-TE3219SM.html>

## Documents / Resources



[Mandis TECHNEMA TE3219SM Replacement Remote Control](#) [pdf] Instructions  
TECHNEMA TE3219SM Replacement Remote Control, TECHNEMA TE3219SM, Replacement  
Remote Control, Remote Control

## References

- [User Manual](#)