



Mandis TECHNEMA TE3219SM Replacement Remote Control Instructions

[Home](#) » [Mandis](#) » Mandis TECHNEMA TE3219SM Replacement Remote Control Instructions 



Contents

1 **TECHNEMA TE3219SM**

2 Documents /
Resources

2.1 References

TECHNEMA TE3219SM



Original		Rechange	
	Power		Power
	Input		AV / Input / RDS
	Sleep		Sleep / Timer
	Nicam		Audio / Lang I/II
	P.Mode		Picture / Format
	S.Mode		Sound / Title
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	-/--	 + 	Shift + Guide / EPG / -/--
	0		0

Original		Rechange	
	Recall		Back / Return
	Del	 + 	Shift + Exit / Cancel / Clear
	Subtitle		Subtitle / EQ
	EPG		Guide / EPG / +/-
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	Mute		Mute / Dimmer
	Up		Up
	Info		Info / Angle
	Left		Left
	OK / CH List		OK
	Right		Right
	Menu		Menu / Home
	Down		Down
	Exit		Exit / Cancel / Clear





Original	Rechange	Original	Rechange
	Vol+		<< / TV/Radio
	Home		>> / Hold
	CH+ / Page+		>> / Hold
	Vol-		Stop / Reveal
	Browser		I<< / Size
	CH- / Page-		>>I / Index
	Rec / Rec Mode		
	Fav / Goto		
	Fav / Goto		
	T.Shift		
	PVR List		
	S.Page		
	Zoom		
	Play/Pause / TTX		
	Play/Pause / TTX		
	Play/Pause / TTX		
	<< / TV/Radio		



<https://tout-telecommandes.fr/fr/TECHNEMA/1066948-92286-telecommande-de-remplacement-pour-TECHNEMA-TE3219SM.html>

Documents / Resources

	Mandis TECHNEMA TE3219SM Replacement Remote Control [pdf] Instructions TECHNEMA TE3219SM Replacement Remote Control, TECHNEMA TE3219SM, Replacement Remote Control, Remote Control
--	---

References

- [M Télécommande qui remplace TECHNEMA TE3219SM](#)
- [User Manual](#)