







Mandis Teco 84B Remote Control Replacement Instructions

 

 

 

 

 

 

 

 

 



 

 



[Home](#) » [Mandis](#) » Mandis Teco 84B Remote Control Replacement Instructions 



 

 

 



 

 

 



 





 

Mandis TECO 84B Remote Control Replacement Instructions



 

 





Original		Recharge	
	Mute		Mute / Dimmer
	Power		Power

	AV / S / SCART		AV / Input / RDS
	HDTV / PC / HDMI		Shift + Fav / Marker / PC
	TV / DTV		TV/Radio /
	Index / Select		OK
	Guide / Sub Page		Shift + Guide / EPG / -/
	Teletext / Exit		Exit / Cancel / Clear
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	Up		Up
	Left		Left
	Menu		Menu / Home

	Right		Right
	Down		Down
	1		1
	2		2
	3		3
	CH+		CH+ / Page+
	4		4
	5		5
	6		6
	CH-		CH- / Page
	7		7
	8		8
	9		9

	Vol+		Vol+
	-/-		Guide / EPG / -/-
	0		0
	Return		Back / Return
	Vol-		Vol
	Surround		Eject / Surround
	Wide		Picture / Format
	Sound		Sound / Title
	Display		Display / Media
	Subtitle		Subtitle / EQ
	Video Mode		Setup / OPT /
	Text		Text / Goto
	Info		Info / Angle

	Audio Mode		Audio / Lang I/II
	Favorites		Fav / Marker / PC
	List		Smart / List
	Hold		Stop / Hold

<https://tout-telecommandes.fr/tr/Teco/1060776-21484-telecommande-de-remplacement-pour-Teco-848.html>



Contents

- [1 Documents / Resources](#)
 - [1.1 References](#)
 - [2 Related Posts](#)

Documents / Resources

	<p>Mandis Teco 84B Remote Control Replacement [pdf] Instructions Teco 84B Remote Control Replacement, Teco 84B, Remote Control Replacement, Control Replacement, Replacement</p>
---	---

References

- [User Manual](#)