

Mandis Teco 84B Replacement Remote Control Instructions

Mandis Teco 84B Replacement Remote Control Instructions

 



 

 

 

 



 

 



 

 





 

 

Contents

- [1 Product Overview](#)
- [2 Documents / Resources](#)
 - [2.1 References](#)
- [3 Related Posts](#)

Product Overview



 Mute	 Mute / Dimmer
 Power	 Power
 AV / S / SCART	 AV / Input / RDS
 HDTV / PC / HDMI	 Shift + Fav+/ Marker / PC
 TV / DTV	 TV/Radio /
 Index / Select	 OK
 Guide / Sub Page	 Shift +  +Guide / EPG / -/-
 Teletext / Exit	 Exit / Cancel / Clear
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 Up	 Up
 Left	 Left
 Menu	 Menu / Home
 Right	 Right
 Down	 Down

 1	 1
 2	 2
 3	 3
 CH+	 CH+ / Page+
 4	 4
 5	 5
 6	 6
 CH-	 CH- / Page-
 7	 7
 8	 8
 9	 9
 Vol+	 Vol+
 -/-	 Guide / EPG / -/-
 0	 0
 Return	 Back / Return
 Vol-	 Vol-





Surround



Eject / Surround



Documents / Resources

	<p>Mandis Teco 84B Replacement Remote Control [pdf] Instructions Teco 84B Replacement Remote Control, Teco 84B, Replacement Remote Control, Remote Control, Control</p>
	<p>Mandis Teco 84B Replacement Remote Control [pdf] Instructions Teco 84B Replacement Remote Control, Teco 84B, Replacement Remote Control, Remote Control, Control</p>

References

- [M Télécommande qui remplace TECO 84B](#)
- [User Manual](#)