



Mandis Thomson RC8002N Replacement Remote Control User Guide

[Home](#) » [Mandis](#) » Mandis Thomson RC8002N Replacement Remote Control User Guide 



Contents

- [1 Thomson RC8002N Replacement Remote Control](#)
- [2 Documents / Resources](#)
 - [2.1 References](#)
- [3 Related Posts](#)

Thomson RC8002N Replacement Remote Control



[RC8002N-TV](#) ([TV](#))

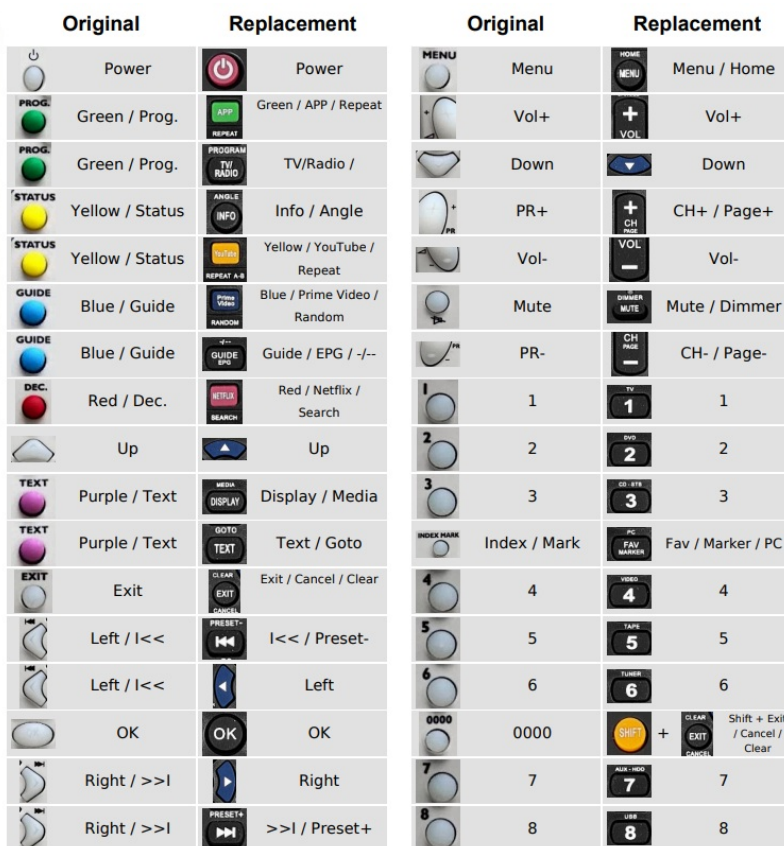
 


Original		Replacement		Original		Replacement	
	Power		Power		Menu		Menu / Home
	Green / Prog.		Green / APP / Repeat		Vol+		Vol+
	Green / Prog.		TV/Radio /		Down		Down
	Yellow / Status		Yellow / YouTube / Repeat		PR+		CH+ / Page+
	Yellow / Status		Info / Angle		Vol-		Vol-
	Blue / Guide		Blue / Prime Video / Random		Mute		Mute / Dimmer
	Blue / Guide		Guide / EPG / --		PR-		CH- / Page-
	Red / Dec.		Red / Netflix / Search		1		1
	Up		Up		2		2
	Purple / Text		Display / Media		3		3
	Purple / Text		Text / Goto		Index / Mark		Fav / Marker / PO
	Exit		Exit / Cancel / Clear		4		4
	Left / I<<		Left		5		5
	Left / I<<		I<< / Preset-		6		6
	OK		OK		0000		Shift + Exit / Cancel / Clear
	Right / >>I		Right		7		7
	Right / >>I		>>I / Preset+		8		8

[illegible]

<https://all-remote-controls.co.uk/en/Thomson/1061003-10814-replacement-remote-control-for-Thomson-RC8002N-21215130.html>

RC8002N-VCR (DVD)

[illegible]

Mandis shop

Documents / Resources

	Mandis Thomson RC8002N Replacement Remote Control [pdf] User Guide Thomson RC8002N Replacement Remote Control, Thomson RC8002N, Replacement Remote Control, Remote Control
	Mandis Thomson-RC8002N Replacement Remote Control [pdf] User Manual Thomson-RC8002N Replacement Remote Control, Thomson-RC8002N, Replacement Remote Control, Remote Control

References

- [M Replacement remote control for THOMSON RC8002N \(21215130\)](#)
- [User Manual](#)