



Mandis TM1850A Original Remote Control Instructions

[Home](#) » [Mandis](#) » Mandis TM1850A Original Remote Control Instructions 

Contents

- [1 Mandis TM1850A Original Remote Control](#)
- [2 Product Information](#)
- [3 Specifications](#)
- [4 Product Usage Instructions](#)
- [5 OVERVIEW](#)
- [6 REMOTE FUNCTION](#)
- [7 FAQ](#)
- [8 Documents / Resources](#)
 - [8.1 References](#)
- [9 Related Posts](#)

Mandis

Mandis TM1850A Original Remote Control



Product Information

The Samsung Smart-TV is a high-quality television with advanced features and functionality. It provides an immersive viewing experience and allows you to access a wide range of entertainment options.

Specifications

- **Model:** Samsung Smart-TV
- **Power:** 123 / keypad
- **Control buttons:** Power, Extra, Up, Left, OK, Right, Down, Return, Vol Up, Home / Hub, CH Up, Vol Down, CH Down, Play / Pause, Mute
- **Additional buttons:** Recharge, Eject / Surround, D.Menu / Top, MUEpnu, Left, OK, Right, Down, Back / Return, Vol+, Smart / List, CH+ / Page+, Vol-, CH- / Page-

Product Usage Instructions

Power On/Off

To turn on the Samsung Smart TV, press the Power button. To turn it off, press the Power button again.

Navigation

Use the directional buttons (Up, Down, Left, Right) to navigate through the menus and options on the screen. Press the OK button to select an option.

Volume Control

To adjust the volume, use the Vol Up and Vol Down buttons. Press the Mute button to mute or unmute the sound.

Channel Control

Use the CH Up and CH Down buttons to change channels. Press the numbers on the keypad to directly enter a channel number.

Play/Pause and Media Control

Use the Play/Pause button to control media playback. The buttons for Eject, Surround, D.Menu, Top, MUEpnu, Back/Return, and Pause/Step/Freeze have specific functions depending on the media being played.

Smart Features

Press the Home/Hub button to access the smart features of the Samsung Smart-TV. Use the Smart/List button to view a list of available apps and features.

OVERVIEW

 




REMOTE FUNCTION

Original		Rechange	
	Power		Power
	123 / keypad		Eject / Surround
	Extra		D.Menu / Top
	Up		Up
	Left		Left
	OK		OK
	Right		Right
	Down		Down
	Return		Back / Return
	Vol Up		Vol+
	Home / Hub		Smart / List
	CH Up		CH+ / Page+
	Vol Down		Vol-
	CH Down		CH- / Page-
	Play / Pause		Shift + Play /
	Mute		Mute / Dimmer
	Play		Play / Slow

Original		Rechange	
Pause			Pause / Step / Freeze
Stop			Stop / Hold
Rec			Rec / Rec Mode
<<			<< / Tune-
>>			>> / Tune+
I<<			I<< / Preset-
>>I			>>I / Preset+
S.Mode			Sound / Title
AD			Audio / Lang I/II
AD / Subt.			Subtitle / EQ
Picture			Picture / Format
P.Size			Zoom / Size
Sleep			Sleep / Timer
Auto Prog			TV/Radio /
Tools			Setup / OPT /
TTX/MIX			Text / Goto
Source			AV / Input / RDS

Original		Rechange	Original		Rechange
Menu		Menu / Home	Rakuten Tv		Green / APP / Repeat
Info		Info / Angle	Search		Yellow / YouTube / Repeat
Exit		Exit / Cancel / Clear	Prime Video		Blue / Prime Video / Random
CH List		Display / Media	Still		Shift + Pause / Step /
1		1	Dual I-II		Shift + Audio / Lang I/II
2		2	Add / Del		Shift + Eject / Surround
3		3	TV / DTV		Shift + TV/Radio / Program
4		4	E-Manual		Shift + OK
5		5	Media P.		Shift + Display / Media
6		6	-/--		Shift + Guide / EPG / -/--
7		7	PRE-CH		Shift + Fav / Marker / PC
8		8	Red		Shift + Red / Netflix /
9		9	Green		Shift + Green / APP /
Guide		Guide / EPG / -/--	Yellow		Shift + Yellow / YouTube /
0		0	Blue		Shift + Blue / Prime
Fav CH		Fav / Marker / PC			
Netflix		Red / Netflix / Search			

<https://tout-telecommandes.fr/fr/Samsung/1037832-78618-telecommande-de-remplacement-pour-Samsung-TM1850A-BN59-01259B.html>

FAQ

Q: Where can I find a replacement remote control for the Samsung Smart-TV?

A: You can find a replacement remote control for the Samsung Smart-TV on this website: [Replacement Remote Control](#).

Documents / Resources

	Mandis TM1850A Original Remote Control [pdf] Instructions TM1850A Original Remote Control, TM1850A, Original Remote Control, Remote Control
---	--

References

- [M Télécommande qui remplace SAMSUNG TM1850A \(BN59-01259B\)](#)

- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)