



Mandis TM75 Remote Control Instructions

[Home](#) » [Mandis](#) » Mandis TM75 Remote Control Instructions 



Contents

- [1 TM75 Remote Control](#)
- [2 Documents / Resources](#)
 - [2.1 References](#)

TM75 Remote Control



Samsung AA59-00312B



Original		Replacement		Original		Replacement	
	Power		Power		Vol-		Vol-
	1		1		P-		CH- / Page-
	2		2		Menu/[=i]		Menu / Home
	3		3		TV		TV/Radio /
	4		4		Info/[=?]		Info / Angle
	5		5		Up		Up
	6		6		Exit		Exit / Cancel / Clear
	7		7		Left		Left
	8		8		Enter		OK
	9		9		Right		Right
	0		0		Down		Down
	TIX/MIX		Guide / EPG / -/-		[=]TIX/MIX		Text / Goto
	PRE-CH		Back / Return		[=o]		Audio / Lang I/II
	Vol+		Vol+		[=♦]P.Size/[<>]		Zoom / Size
	P+		CH+ / Page+		[=♦]Sleep/Timer		Sleep / Timer
	Video/[=_]		AV / Input / RDS		Red		Red / Netflix / Search
	Mute		Mute / Dimmer		Green		Green / APP / Repeat



