



Mandis TM940 Remote Control Instruction Manual

[Home](#) » [Mandis](#) » Mandis TM940 Remote Control Instruction Manual 

Mandis TM940 Remote Control Instruction Manual



Contents

[1 Assembly Instruction](#)

[2 Documents / Resources](#)

 
[2.1 References](#)

Assembly Instruction

Original		Recharge	
	Power		Power
	Source		AV / Input / RDS
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	TTX/MIX		Text / Goto
	0		0
	PRE-CH		Back / Return
	Vol+		Vol+
	Mute		Mute / Dimmer
	P+		CH+ / Page+

Original

Recharge

	Vol-		Vol-
	CH LIST		Smart / List
	P-		CH- / Page-
	Content		D.Menu / Top
	Menu		Menu / Home
	Guide		Guide / EPG / -/--
	Tools		Setup / OPT /
	Info		Info / Angle
	Up		Up
	Left		Left
	OK		OK
	Right		Right
	Return		Shift + Back / Return
	Down		Down
	Exit		Exit / Cancel / Clear
	Red/A		Red / Netflix / Search
	Green/B		Green / APP / Repeat

Documents / Resources



[Mandis TM940 Remote Control](#) [pdf] Instruction Manual
TM940 Remote Control, TM940, Remote Control, Control

References

- [M Télécommande qui remplace SAMSUNG TM940 \(AA59-00496A\)](#)
- [User Manual](#)