



Mandis TNT1226-MPEG4 Remote Control Instructions

[Home](#) » [Mandis](#) » Mandis TNT1226-MPEG4 Remote Control Instructions 

Contents

- [1 Mandis TNT1226-MPEG4 Remote Control](#)
- [2 Product Information](#)
- [3 Product Usage Instructions](#)
- [4 Overview](#)
- [5 Documents / Resources](#)
 - [5.1 References](#)
- [6 Related Posts](#)

Mandis

Mandis TNT1226-MPEG4 Remote Control



Product Information

Specifications

- Brand: Schaub-Lorenz
- Model: TNT1226-MPEG4
- Power: AC 100-240V, 50/60Hz
- Dimensions: [insert dimensions]
- Weight: [insert weight]
- Supported Formats: MPEG4
- Remote Control: Yes
- Replacement Remote Control: [link to replacement remote control]

Product Usage Instructions

Power and Volume Control

- To turn on/off the device, press the “Power” button.
- To mute/unmute the sound, press the “Mute” button.
- To adjust the volume, use the “Vol +” and “Vol -” buttons.

Navigating Menus and Channels

- Use the number buttons (1-9) to directly access channels or menu options.
- The “Menu” button is used to access the device’s menu or go back to the home screen.
- The “Up / CH +” button is used to navigate upwards in menus or change to the next channel.

- The “Down / CH -” button is used to navigate downwards in menus or change to the previous channel.

Additional Features

- The “Text” button is used to access teletext or go to a specific page.
- The “Sub-T” button is used to display subtitles or change to the next subtitle track.
- The “Rec” button is used to start recording or enter a recording mode.
- The “Play / Pause” button is used to play or pause media playback.
- The “Stop” button is used to stop media playback or recording.

FAQ

Where can I find a replacement remote control for my Schaub-Lorenz TNT1226-MPEG4?

You can find a replacement remote control for your Schaub-Lorenz TNT1226-MPEG4 on the following website:
[Replacement Remote Control](#).

[Schaub-Lorenz TNT1226-MPEG4](#)

Overview



Original	Recharge	Original	Recharge
	Power		Exit / Cancel / Clear
	Mute		Vol-
	1		Left
	2		OK
	3		Vol+
	4		Right
	5		Subtitle / EQ
	6		Down
	7		CH- / Page-
	8		Audio / Lang I/II
	9		Rec / Rec Mode
	Menu		Sleep / Timer
	0		Smart / List
	Last		Info / Angle
	Text		Red / Netflix / Search
	Up / CH +		I<< / Preset-
	Up / CH +		<< / Tune-





Original	Rechange	Original	Rechange
	Green / <<		Green / APP / Repeat
	Yellow / >>		>> / Tune+
	Yellow / >>		Yellow / YouTube / Repeat
	Blue / >>I		>>I / Preset+
	Blue / >>I		Blue / Prime Video / Random
	View Rec		Shift + Rec / Rec Mode
	USB		Shift + 8
	Play / Pause		Play / Slow
	Play / Pause		Pause / Step / Freeze
	Stop		Stop / Hold



<https://tout-telecommandes.fr/fr/Schaub-Lorenz/1058835-79452-telecommande-de-remplacement-pour-Schaub-Lorenz-SCHL001.html>

Documents / Resources



[Mandis TNT1226-MPEG4 Remote Control](#) [pdf] Instructions
TNT1226-MPEG4 Remote Control, TNT1226-MPEG4, Remote Control, Control

References

- [User Manual](#)