

Mandis TNT1226-MPEG4 Replacement Remote Control Instructions

Contents

1

Schaub Lorenz TNT1226-MPEG4

2

Documents / Resources

2.1

References

3

Related Posts



[Schaub Lorenz TNT1226-MPEG4](#)



Original		Rechange	
	Power		Power

	Mute		Mute / Dimmer
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	Menu		Menu / Home
	0		0
	Last		Back / Return
	Text		Text / Goto
	Up / CH +		Up
	Up / CH +		CH+ / Page+
	Exit		Exit / Cancel / Clear
	Left / Vol -		Vol-
	Left / Vol -		Left

	OK		OK
	Right / Vol +		Vol+
	Right / Vol +		Right
	Sub-T		Subtitle / EQ
	Down / CH –		Down
	Down / CH –		CH- / Page-
	Audio		Audio / Lang I/II
	Rec		Rec / Rec Mode
	Timer		Sleep / Timer
	Time shift		Smart / List
	Info		Info / Angle
	Red / I<<		Red / Netflix / Search
	Red / I<<		I<< / Preset-
	Green / <<		<< / Tune-
	Green / <<		Green / APP / Repeat
	Yellow / >>		>> / Tune+
	Yellow / >>		Yellow / YouTube / Repeat
	Blue / >>I		>>I / Preset+

	Blue / >>I		Blue / Prime Video / Random
	View Rec		Shift + Rec / Rec Mode
	USB		Shift + 8
	Play / Pause		Play / Slow
	Play / Pause		Pause / Step / Freeze
	Stop		Stop / Hold



<https://tout-telecommandes.fr/fr/Schaub-Lorenz/1058835-79452-telecommande-de-replacement-pour-Schaub-Lorenz-SCHL001.html>

Documents / Resources



[Mandis TNT1226-MPEG4 Replacement Remote Control](#) [pdf] Instructions
TNT1226-MPEG4 Replacement Remote Control, TNT1226-MPEG4, Replacement Remote Control, Remote Control, Control

References

- [User Manual](#)