



Mandis TNT65HDU Remote Control Instructions

[Home](#) » [Mandis](#) » Mandis TNT65HDU Remote Control Instructions 

Contents

- [1 Mandis TNT65HDU Remote Control](#)
- [2 Product Information](#)
- [3 Product Usage Instructions](#)
- [4 KEYS FUNCTIONS](#)
- [5 Documents / Resources](#)
 - [5.1 References](#)



Mandis TNT65HDU Remote Control



Product Information

• Specifications

- **Model:** Servimat TNT65H DU
- **Compatibility:** Original and Replacement remote control
- **Power:** Mains power
- **Features:** TV and Radio functionality, Menu navigation,
- **Recording,** Volume control, Channel selection, Teletext support
- **Dimensions:** Not specified
- **Weight:** Not specified

Product Usage Instructions

• Power On/Off

- To turn on the Servimat TNT65H DU, press the “Power” button.
- To turn it off, press the same button again or use the standby button labelled “Marche / Veille”.

• Volume Control

- To adjust the volume level, use the “+” and “-” buttons labelled “Vol + Vol -”.
- Press the “+” button to increase the volume and the “-” button to decrease it.

• Channel Selection

- To change the TV or Radio channel, use the number buttons (1-9, 0) or the channel up/down buttons labelled “CH + CH -”.
- Enter the channel number using the numeric buttons or press the channel up/down buttons to cycle through the available channels.

- **Menu Navigation**

- The menu navigation is done using the arrow buttons labelled “Up”, “Left”, “OK”, “Right”, and “Down”.
- Use the arrow buttons to navigate through the menu options and press the “OK” button to confirm a selection.

- **Teletext**

- To access teletext, press the “TTX” or “Text” button.
- Use the arrow buttons to navigate through the teletext pages and press the “OK” button to select a specific page or option.

- **Recording**

- To start recording, press the “Rec” button.
- To stop recording, press the “Stop” button.
- Make sure you have a compatible storage device connected to the Servimat TNT65H DU for recording purposes.

- **Frequently Asked Questions (FAQ)**

- **Q:** Where can I find a replacement remote control for the Servimat TNT65H DU?
- **A:** You can find a replacement remote control for the Servimat TNT65H DU on the following website:
[Replacement Remote Control](#).

KEYS FUNCTIONS



Original		Rechange		Original		Rechange	
	Marche / Veille		Power		TV / Radio		TV/R
	Arret Son		Mute		Menu		Menu
	1		1		Quitter		Exit
	2		2		Up		Up
	3		3		Left		Left
	4		4		OK		Ok
	5		5		Right		Right
	6		6		Down		Down
	7		7		Rec		Rec
	8		8		Stop		Stop
	9		9		Vol +		Vol +
	0		0		Vol -		Vol -
	Info		Info		TTX		Text
	Retour		Back		FAV		Pre Ch
	EPG		Guide		CH +		Ch +
	Audio		Dual		CH -		Ch -
	S-Titres		Subt		D.D		Smart

Original	Rechange	Original	Rechange
 I<< Prev	 I<<		
 Play / Lecture	 Play		
 << REW	 <<		
 Enreg.	 +  Shift + Rec		
 >>I Next	 >>I		
 Pause	 Pause		
 >> FWD	 >>		
 Red	 Red		
 Green	 Green		
 Yellow	 Yellow		
 Blue / Timer	 Blue		
 Blue / Timer	 AV		

<https://tout-telecommandes.fr/fr/SERVIMAT/1059469-92380-telecommande-de-remplacement-pour-SERVIMAT-DF00-TNT65HDU.html>.



Documents / Resources



[Mandis TNT65HDU Remote Control](#) [pdf] Instructions
TNT65HDU, TNT65HDU Remote Control, Remote Control, Control

References

- [M Télécommande qui remplace SERVIMAT DF00 \(TNT65HDU\)](#)
- [User Manual](#)