

Mandis TNT65HDU Replacement Remote Control



Mandis TNT65HDU Replacement Remote Control Instructions

[Home](#) » [Mandis](#) » Mandis TNT65HDU Replacement Remote Control Instructions 

Contents

- [1 Mandis TNT65HDU Replacement Remote Control](#)
- [2 Specifications](#)
- [3 Product Usage Instructions](#)
- [4 FAQ](#)
- [5 Product Information](#)
- [6 Remote Using Instruction](#)
- [7 Documents / Resources](#)
 - [7.1 References](#)



Mandis TNT65HDU Replacement Remote Control



Specifications

- Model: SERVIMAT TNT65HDU
- Power: AC 100-240V, 50/60Hz
- Dimensions: [insert dimensions]
- Weight: [insert weight]
- Color: [insert color]
- Supported formats: [insert supported formats]

Product Usage Instructions

Power On/Off

To turn on the SERVIMAT TNT65HDU, press the “Power” button. To turn off the device, press and hold the “Power” button until the device shuts down.

Recording and Playback

To record a program, press the “Rec” button. To stop recording, press the “Stop” button. To pause and resume playback, press the “Pause” button.

Timer

The SERVIMAT TNT65HDU has a timer feature that allows you to schedule recordings or set reminders. To access the timer, press the “Timer” button.

TV/Radio Mode

To switch between TV and Radio mode, press the “TV/Radio” button.

Additional Features

The SERVIMAT TNT65HDU offers additional features such as dual subtitles, teletext, favorite channels, and smart functions. Please refer to the user manual for detailed instructions on how to use these features.

FAQ

Q: Where can I find a replacement remote control for the SERVIMAT TNT65HDU?

A: You can purchase a replacement remote control for the SERVIMAT TNT65HDU from [\[insert website link\]](#).

Product Information



Remote Using Instruction

Original /Recharge

	Marche / Veille		Power		TV / Radio		TV/R
	Arret Son		Mute		Menu		Menu
	1		1		Quitter		Exit
	2		2		Up		Up
	3		3		Left		Left
	4		4		OK		Ok
	5		5		Right		Right
	6		6		Down		Down
	7		7		Rec		Rec
	8		8		Stop		Stop
	9		9		Vol +		Vol +
	0		0		Vol -		Vol -
	Info		Info		TTX		Text
	Retour		Back		FAV		Pre Ch
	EPG		Guide		CH +		Ch +
	Audio		Dual		CH -		Ch -
	S-Titres		Subt		D.D		Smart

	I<< Prev		I<<
	Play / Lecture		Play
	<< REW		<<
	Enreg.	+	Shift + Rec
	>>I Next		>>I
	Pause		Pause
	>> FWD		>>
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue / Timer		Blue
	Blue / Timer		AV

- <https://tout-telecommandes.fr/fr/SERVIMAT/1059469-92380-telecommande-de-remplacement-pour-SERVIMAT-DF00-TNT65H DU.html>

Documents / Resources



[Mandis TNT65HDU Replacement Remote Control](#) [pdf] Instructions

TNT65HDU Replacement Remote Control, TNT65HDU, Replacement Remote Control, Remote Control

References

- [M Télécommande qui remplace SERVIMAT DF00 \(TNT65HDU\)](#)
- [User Manual](#)