



Mandis TNT65HDU Servimat Remote Control Instructions

[Home](#) » [Mandis](#) » Mandis TNT65HDU Servimat Remote Control Instructions 

Contents

- [1 Mandis TNT65HDU Servimat Remote Control](#)
- [2 Product Information](#)
- [3 Product Usage Instructions](#)
- [4 Instructions](#)
- [5 Documents / Resources](#)
 - [5.1 References](#)
- [6 Related Posts](#)



Mandis TNT65HDU Servimat Remote Control



Product Information

The SERVIMAT TNT65HDU is a remote control device designed for use with SERVIMAT DF00 TNT65HDU. It allows users to control various functions of the device, such as power, volume, channel selection, and menu navigation.

Specifications

- **Model:** SERVIMAT TNT65HDU
- **Compatibility:** SERVIMAT DF00 TNT65HDU
- **Power:** Requires batteries (not included)
- **Wireless Range:** Up to 10 meters

Product Usage Instructions

• Power On / Off

To turn on the SERVIMAT DF00 TNT65HDU device, press the “Power” button located on the remote control. To turn off the device, press the “Power” button again.

• Volume Control

To adjust the volume, use the “Vol +” and “Vol -” buttons on the remote control. Press the “Vol +” button to increase the volume, and press the “Vol -” button to decrease the volume.

• Channel Selection

To change channels, use the number buttons (1-9) on the remote control. Press the corresponding number button for the desired channel. For channels with double digits, press the first digit followed by the second digit.

• Menu Navigation

To navigate through the device menu, use the directional buttons on the remote control. Press the “Up,” “Down,” “Left,” and “Right” buttons to move through the menu options. Press the “OK” button to select a menu option.

• Additional Functions

The SERVIMAT TNT65HDU remote control also provides additional functions such as audio control, subtitles, dual subtitles, TV/Radio mode selection, and timer control. Refer to the device manual for detailed instructions on using these functions.

FAQ

• Q: How do I replace the batteries in the SERVIMAT TNT65HDU remote control?

A: To replace the batteries, locate the battery compartment on the back of the remote control. Open the compartment and remove the old batteries. Insert new batteries following the correct polarity (+/-) indicated inside the compartment. Close the compartment securely.

• Q: What is the wireless range of the SERVIMAT TNT65HDU remote control?

A: The wireless range of the remote control is up to 10 meters. Ensure that there are no obstructions between the remote control and the device for optimal performance.

• Q: Can I use the SERVIMAT TNT65HDU remote control with other devices?

A: The SERVIMAT TNT65HDU remote control is specifically designed for use with SERVIMAT DF00 TNT65HDU. It may not be compatible with other devices. Refer to the device manual for information on compatible remote controls.

[SERVIMAT TNT65HDU](#)

Instructions



Original	Recharge	Original	Recharge
 Marche / Veille	 Power	 TV / Radio	 TV/R
 Arrêt Son	 Mute	 Menu	 Menu
 1	 1	 Quitter	 Exit
 2	 2	 Up	 Up
 3	 3	 Left	 Left
 4	 4	 OK	 Ok
 5	 5	 Right	 Right
 6	 6	 Down	 Down
 7	 7	 Rec	 Rec
 8	 8	 Stop	 Stop
 9	 9	 Vol +	 Vol +
 0	 0	 Vol -	 Vol -
 Info	 Info	 TTX	 Text
 Retour	 Back	 FAV	 Pre Ch
 EPG	 Guide	 CH +	 Ch +
 Audio	 Dual	 CH -	 Ch -
S-Titres	Subt	D.D	Smart





	Mandis TNT65HDU Servimat Remote Control [pdf] Instructions TNT65HDU Servimat Remote Control, TNT65HDU, Servimat Remote Control, Remote Control, Control
	Mandis TNT65HDU Servimat Remote Control [pdf] Instructions TNT65HDU Servimat Remote Control, TNT65HDU, Servimat Remote Control, Remote Control, Control
	Mandis TNT65HDU Servimat Remote Control [pdf] Instructions TNT65HDU Servimat Remote Control, TNT65HDU, Servimat Remote Control, Remote Control, Control
	Mandis TNT65HDU Servimat Remote Control [pdf] Instructions TNT65HDU Servimat Remote Control, TNT65HDU, Servimat Remote Control, Remote Control, Control
	Mandis TNT65HDU Servimat Remote Control [pdf] Instructions TNT65HDU Servimat Remote Control, TNT65HDU, Servimat Remote Control, Remote Control, Control
	Mandis TNT65HDU Servimat Remote Control [pdf] Instructions TNT65HDU Servimat Remote Control, TNT65HDU, Servimat Remote Control, Remote Control, Control
	Mandis TNT65HDU Servimat Remote Control [pdf] Instructions TNT65HDU Servimat Remote Control, TNT65HDU, Servimat Remote Control, Remote Control, Control
	Mandis TNT65HDU Servimat Remote Control [pdf] Instructions TNT65HDU Servimat Remote Control, TNT65HDU, Servimat Remote Control, Remote Control, Control

References

- [Télécommande qui remplace SERVIMAT DF00 \(TNT65HDU\)](#)
- [User Manual](#)

[Manuals+.](#) [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.