



Mandis VAR001 Replacement Remote Control Instruction Manual

[Home](#) » [Mandis](#) » Mandis VAR001 Replacement Remote Control Instruction Manual 



VAR001 Replacement Remote Control Instruction Manual

Contents

- [1 VAR001 Replacement Remote Control](#)
- [2 Documents / Resources](#)
 - [2.1 References](#)

VAR001 Replacement Remote Control



Original	Replacement	Original	Replacement

	Standby
	Mute
	1
	2
	3
	4
	5
	6
	7
	8
	9
	0
	Reclist
	Recall
	EPG
	Subtitle
	Audio

	Power
	Mute
	1
	2
	3
	4
	5
	6
	7
	8
	9
	0
	Smart
	Pre Ch
	Guide
	Subt
	Dual

	Display
	TV / Radio
	Up
	Right
	Down
	Left
	OK
	Menu
	Exit
	Vol +
	Vol -
	FAV
	Rec
	Media
	CH +
	CH -
	Source

	Info
	TV
	U
	Rig
	Do
	Le
	C
	Me
	Ex
	Vo
	Vo
	
	R
	Me
	CH
	CH
	A

	P.Mode
	S.Mode
	Sleep
	Text
	Reveal
	Subpage
	Play/Pause / Timeshift
	Play/Pause / Timeshift
	Stop
	Index
	Size
	<<
	>>
	l<<
	>>l
	Red
	Green

	Format
	+  Shift + Dual
	Sleep
	Text
	3D
	+  Shift + Subt
	Play
	Pause
	Stop
	+  Shift + Info
	Eject
	<<
	>>
	l<<
	>>l
	Red
	Green

	Yellow
	Blue



<https://all-remote-controls.co.uk/en/Brandt/1058724-82824-replacement-remote-control-for-Brandt-B1931WHD.html>



[Mandis VAR001 Replacement Remote Control](#) [pdf] Instruction Manual
B1931WHD, VAR001, VAR001 Replacement Remote Control, Replacement Remote Control, Remote Control, Control

References

- [User Manual](#)