



Mandis VAR002 Remote Control Instructions

[Home](#) » [Mandis](#) » Mandis VAR002 Remote Control Instructions 

Contents

- [1 Mandis VAR002 Remote Control](#)
- [2 Product Information](#)
- [3 Product Usage Instructions](#)
- [4 FAQ](#)
- [5 USING INSTRUCTIONS](#)
- [6 Documents / Resources](#)
 - [6.1 References](#)
- [7 Related Posts](#)

Mandis

Mandis VAR002 Remote Control



Product Information

Specifications

- Aspect Ratio: 16:9 / Wide
- Power: Original / Replacement
- Mute: 1, 2, 3, 4, 5, 6, 7, 8, 9, 0
- Smart: S, P
- 3D: Original / Replacement
- Up, Right, Down, Left: Original / Replacement
- OK, Vol +, Vol -, Menu, Source: Original / Replacement
- CH +, CH -, Info, Sleep, Recall: Original / Replacement
- L / R Index / Play: Original
- Zoom / Pause, Reveal / Stop: Original / Replacement
- TTX Hold / II List / >>I Language / Save / >>: Original
- Red / Radio / Rec: Original / Replacement
- Green / Subtitle: Original / Replacement
- Yellow / Fav, Blue / EPG: Original / Replacement

Product Usage Instructions

- **Power:**
- To turn the device on or off, press the Power button on the remote control.

- **Mute:**

- To mute the audio, press the Mute button on the remote control. Press it again to unmute.

- **Smart**

- The Smart button provides access to smart features or functions on the device. Press the Smart button on the remote control to activate.

- **3D**

- If your device supports 3D functionality, use the 3D button on the remote control to enable or disable the 3D mode.

- **Navigation**

- Use the arrow buttons (Up, Right, Down, Left) on the remote control to navigate through menus and options.

- **OK**

- Press the OK button on the remote control to confirm selections or actions.

- **Volume Control**

- Use the Vol + and Vol – buttons on the remote control to increase or decrease the volume.

- **Menu**

- The Menu button allows you to access the device's menu options. Press the Menu button on the remote control to open the menu.

- **Channel Control:**

- Use the CH + and CH – buttons on the remote control to change channels.

- **Info**

- The Info button provides additional information about the current content or program. Press the Info button on the remote control to view details.

- **Sleep:**

- Press the Sleep button on the remote control to activate or deactivate the sleep timer function.

FAQ

- **Q: Where can I find a replacement remote control for my ALCD161041?**

- A: You can find a replacement remote control for your ALCD161041 on the following website: [Replacement Remote Control for ALCD161041](#)

USING INSTRUCTIONS



Original	Replacement
Power	Power
16:9 / Wide	3D
Mute	Mute
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0	0
F1	Shift + 1
Smart S	Shift + Guide
Smart P	Dual

Original	Replacement
Up	Up
Right	Right
Down	Down
Left	Left
OK	Ok
Vol +	Vol +
Vol -	Vol -
Menu	Menu
Source	AV
CH +	Ch +
CH -	Ch -
Info	Info
Sleep	Sleep
Recall	Back
L / R	Options
Index / Play	Shift + Info
Index / Play	Play



Original	Replacement
Zoom / Pause	Format
Zoom / Pause	Pause
Reveal / Stop	Shift + Text
Reveal / Stop	Stop
TTX	Text
Hold / I<<	Shift + Pause
Hold / I<<	I<<
List / >>I	List
List / >>I	>>I
Language / <<	Shift + Dual
Language / <<	<<
Save / >>	Media
Save / >>	>>
Red / Radio / Rec	Red
Red / Radio / Rec	TV/R
Red / Radio / Rec	Rec
Green / Subtitle	Green

Original	Replacement
Green / Subtitle	Subt
Yellow / Fav	Yellow
Blue / EPG	Blue
Yellow / Fav	Pre Ch
Blue / EPG	Guide



<https://all-remote-controls.co.uk/en/1058735-89933-replacement-remote-control-for-ALCD161041.html>



[Mandis VAR002 Remote Control](#) [pdf] Instructions
VAR002 Remote Control, VAR002, Remote Control, Control

References

- [User Manual](#)